

JOYSTICKS

Empuñaduras
Joysticks
Poignées

Joysticks with button and switch (fitting included)



Empuñaduras con botón e interruptor (racor incluido)

Joysticks mit Taste und Schalter (mit Fitting)

Poignées avec bouton et interrupteur (livrée avec raccord)

Referencia Part n°	DESCRIPCIÓN DESCRIPTION	€
EE1B	1 botón para 1 bobina / 1 button for 1 coil	*
EE1D	1 interruptor balancín para 2 bobinas / 1 button (2 functions) for 2 coils	*
NEW EE1C	3 BOTONES + INTERRUPTOR 2 POS / 3 BUTTONS + 2 POSITION SWITCH	*

EE1C... left photo.EE1B and EE1D... right photo./EE1C... foto izq. EE1B y EE1D... foto derecha. / EE1C... linkes Foto. EE1B und EE1D... rechtes Foto./EE1C... photo de gauche. EE1B und EE1D... photo de droite.

Ergonomic joysticks with back buttons



Empuñaduras con botones posteriores

Ergonomische Joysticks mit Zurück-Taste

Poignées ergonomiques avec des boutons arrière

Referencia Part n°	N° BOTONES BUTTONS NR.	€
EBE11	1	*
EBE12	2	*
EBE13	3	*
EBE15	5	*

Ergonomique joysticks



Empuñaduras ergonómicas

Ergonomische Joysticks

Poignées ergonomiques

Referencia Part n°	N° BOTONES BUTTONS NR.	€
EEI2B	2	*
EEI3B	3	*
EEI4B	4	*
EEI6B	6	*
EEI8B	8	*

EMPUÑADURAS ERGONÓMICAS · ERGONOMIC JOYSTICKS

	N. Micro	Posición MICRO MICRO position
EEI2B	2	B, E
EEI3B	3	B, G, E
EEI4B	4	A, C, D, F
EEI6B	6	A, B, C, D, E, F
EEI8B	8	A, B, C, D, E, F, G, I

Esquema eléctrico / Electrical diagram

