

2/3 Port Mechanical Valve

New

RoHS

A more compact and lightweight VM100F series with a built-in One-touch fitting and resin body has been added.

Lightweight

VM100 60 g* (Conventional model: 95 g)

VM200 90 g* (Conventional model: 111 g)

* Side ported, basic type

Available in vacuum applications (VM100)

-100 kPa to 1 MPa

(VM200: 0 to 1 MPa)



Side ported



Bottom ported




Mounting

Bracket mounting and bottom mounting are newly added.


Bracket mounting




Bottom mounting (Side ported only)

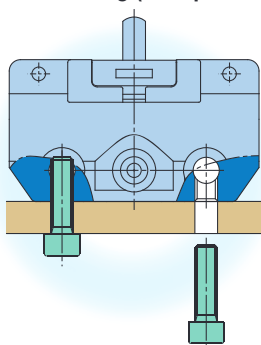

Side mounting

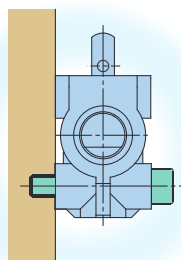


Panel mounting

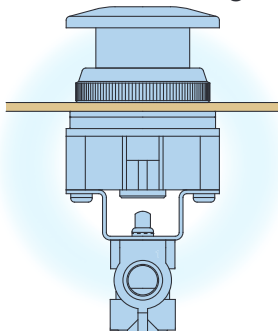


Piping direction

Side ported

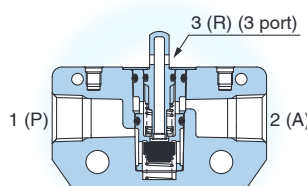


Bottom ported (VM100 only)

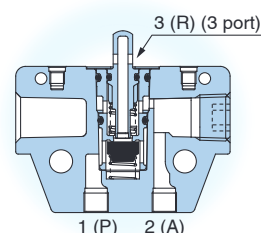

With miniature indicator*

Possible to check if air is output to the secondly port.

* VM100/Bottom ported only

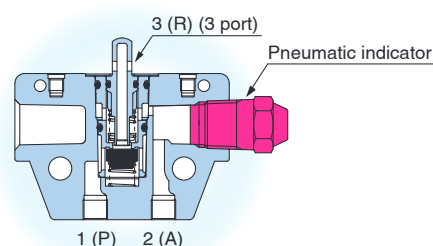


Series **VM100/200**




CAT.EUS12-8A-UK

Mechanical Operation


Roller lever

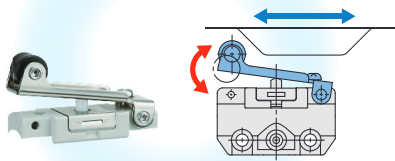


One way roller lever

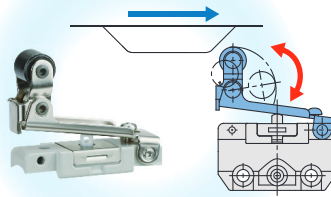


Straight plunger

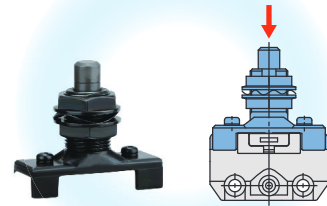

Roller plunger

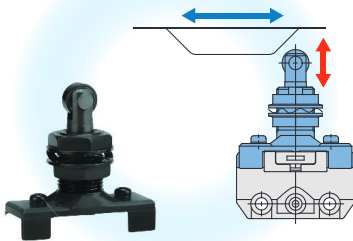


Cross roller plunger

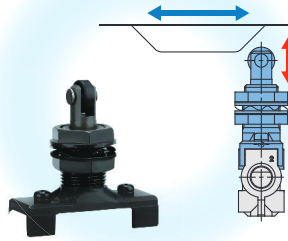


Manual Operation

Toggle lever

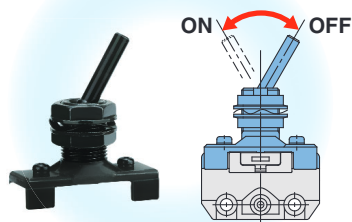


Push button (Mushroom)

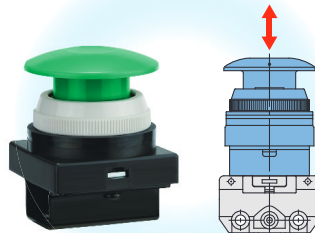


Colour: Red, Black, Green, Yellow

Push button (Extended)

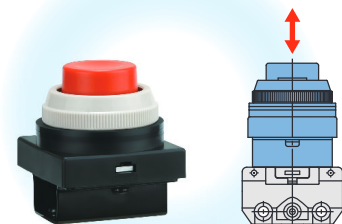


Colour: Red, Black, Green, Yellow

Push button (Flush)

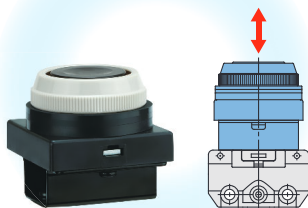

Colour: Red, Black, Green, Yellow

Twist selector (2 position)

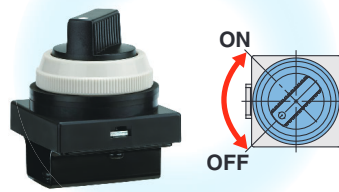


Colour: Red, Black, Green, Yellow

Key selector (2 position)




Twist selector (3 position)

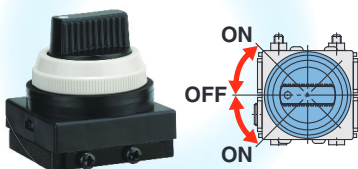

Colour: Red, Black, Green, Yellow

Foot pedal (VM200 only)











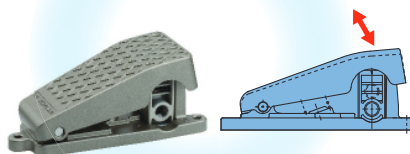


4 colours available for buttons



Push button (Flush) is provided with a set of 4 colours.

Mechanical Valve Variations

Model	Number of ports	Valve construction	Piping direction	Port size (Rc, NPT, G)	Page
VM1000 	2 port  3 port 	Poppet	Side ported Bottom ported	ø4 Hose nipple	 www.smc.eu
VM100 	2 port  3 port 	Poppet	Side ported	1/8	Page 1
			Bottom ported	M5 x 0.8	
VM200 	2 port  3 port 	Poppet	Side ported	1/4	Page 13
VM400 	3 port 	Balanced poppet	Side ported	1/8	
VM800 	3 port 				
VZM400 	5 port 	Metal spool	Side ported	1/8	 www.smc.eu
VZM500 	5 port 	Rubber spool			
VFM200 	5 port 	Metal spool	Side ported	1/4	
VFM300 	5 port 	Rubber spool			




2/3 Port Mechanical Valve

Series VM100

RoHS

A more compact and lightweight VM100F series with a built-in One-touch fitting and resin body has been added.

- Compact size
- Piping options:
Side ported, Bottom ported
- Possible to choose mounting method with side ported:
Side mounting, bottom mounting using screws, or mounting with special bracket
- A variety of actuator types

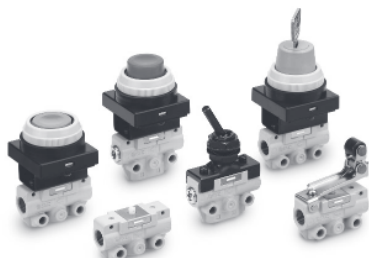

Specifications

Piping	Side ported		Bottom ported	
Fluid	Air			
Operating pressure range	-100 kPa to 1 MPa			
Ambient and fluid temperature	-5 to 60°C (No freezing)			
Flow-rate characteristics	1 (P) ⇒ 2 (A)	2 (A) ⇒ 3 (R)	1 (P) ⇒ 2 (A)	2 (A) ⇒ 3 (R)
C [dm³/(s·bar)]	0.6	0.5	0.5	0.45
b	0.2	0.15	0.2	0.15
Cv	0.11	0.1	0.11	0.1
Q [l/min] (ANR) ^{Note 1)}	144	117	120	105
Lubrication ^{Note 2)}	Not required			
Port size	1/8 (Rc, NPT, G)		M5	
Weight (Basic)	60 g		67 g	
Bracket part number ^{Note 3)}	VM1-B		—	

Note 1) These values have been calculated according to ISO6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.

Note 2) Use turbine oil Class 1 ISO VG32, if lubricated.

Note 3) The bracket can only be used for side mounting of side ported type.

Model

	Piping direction		Side ported				Bottom ported		Actuator	
	Body option		Standard		With bottom mounting thread		—		Actuator part number	Additional weight for actuator
	Number of ports		2 port	3 port	2 port	3 port	2 port	3 port		
Mechanical operation	Basic		VM120-01-00A	VM130-01-00A	VM120U-01-00A	VM130U-01-00A	VM122-M5-00A	VM132-M5-00A	—	—
	Roller lever	Polyacetal roller	VM121-01-01A	VM131-01-01A	VM121U-01-01A	VM131U-01-01A	VM123-M5-01A	VM133-M5-01A	—	11 g
		Hard steel roller	VM121-01-01SA	VM131-01-01SA	VM121U-01-01SA	VM131U-01-01SA	VM123-M5-01SA	VM133-M5-01SA	—	16 g
	One way roller lever	Polyacetal roller	VM121-01-02A	VM131-01-02A	VM121U-01-02A	VM131U-01-02A	VM123-M5-02A	VM133-M5-02A	—	15 g
		Hard steel roller	VM121-01-02SA	VM131-01-02SA	VM121U-01-02SA	VM131U-01-02SA	VM123-M5-02SA	VM133-M5-02SA	—	20 g
	Straight plunger		VM120-01-05A	VM130-01-05A	VM120U-01-05A	VM130U-01-05A	VM122-M5-05A	VM132-M5-05A	VM-05B	43 g
	Roller plunger	Polyacetal roller	VM120-01-06A	VM130-01-06A	VM120U-01-06A	VM130U-01-06A	VM122-M5-06A	VM132-M5-06A	VM-06B	43 g
		Hard steel roller	VM120-01-06SA	VM130-01-06SA	VM120U-01-06SA	VM130U-01-06SA	VM122-M5-06SA	VM132-M5-06SA	VM-06BS	45 g
	Cross roller plunger	Polyacetal roller	VM120-01-07A	VM130-01-07A	VM120U-01-07A	VM130U-01-07A	VM122-M5-07A	VM132-M5-07A	VM-07B	43 g
		Hard steel roller	VM120-01-07SA	VM130-01-07SA	VM120U-01-07SA	VM130U-01-07SA	VM122-M5-07SA	VM132-M5-07SA	VM-07BS	45 g
Manual operation	Toggle lever		VM120-01-08A	VM130-01-08A	VM120U-01-08A	VM130U-01-08A	VM122-M5-08A	VM132-M5-08A	VM-08B	41 g
	Push button (Mushroom)	Red	VM120-01-30RA	VM130-01-30RA	VM120U-01-30RA	VM130U-01-30RA	VM122-M5-30RA	VM132-M5-30RA	VM-30AR	58 g
		Black	VM120-01-30BA	VM130-01-30BA	VM120U-01-30BA	VM130U-01-30BA	VM122-M5-30BA	VM132-M5-30BA	VM-30AB	
		Green	VM120-01-30GA	VM130-01-30GA	VM120U-01-30GA	VM130U-01-30GA	VM122-M5-30GA	VM132-M5-30GA	VM-30AG	
		Yellow	VM120-01-30YA	VM130-01-30YA	VM120U-01-30YA	VM130U-01-30YA	VM122-M5-30YA	VM132-M5-30YA	VM-30AY	
	Push button (Extended)	Red	VM120-01-32RA	VM130-01-32RA	VM120U-01-32RA	VM130U-01-32RA	VM122-M5-32RA	VM132-M5-32RA	VM-32AR	52 g
		Black	VM120-01-32BA	VM130-01-32BA	VM120U-01-32BA	VM130U-01-32BA	VM122-M5-32BA	VM132-M5-32BA	VM-32AB	
		Green	VM120-01-32GA	VM130-01-32GA	VM120U-01-32GA	VM130U-01-32GA	VM122-M5-32GA	VM132-M5-32GA	VM-32AG	
		Yellow	VM120-01-32YA	VM130-01-32YA	VM120U-01-32YA	VM130U-01-32YA	VM122-M5-32YA	VM132-M5-32YA	VM-32AY	
	Push button (Flush)	With a set of red, black, green, yellow	VM120-01-33A	VM130-01-33A	VM120U-01-33A	VM130U-01-33A	VM122-M5-33A	VM132-M5-33A	VM-33A	50 g
	Twist selector (2 position)	Red	VM120-01-34RA	VM130-01-34RA	VM120U-01-34RA	VM130U-01-34RA	VM122-M5-34RA	VM132-M5-34RA	VM-34AR	56 g
		Black	VM120-01-34BA	VM130-01-34BA	VM120U-01-34BA	VM130U-01-34BA	VM122-M5-34BA	VM132-M5-34BA	VM-34AB	
		Green	VM120-01-34GA	VM130-01-34GA	VM120U-01-34GA	VM130U-01-34GA	VM122-M5-34GA	VM132-M5-34GA	VM-34AG	
		Yellow	VM120-01-34YA	VM130-01-34YA	VM120U-01-34YA	VM130U-01-34YA	VM122-M5-34YA	VM132-M5-34YA	VM-34AY	
	Key selector (2 position)		VM120-01-36A	VM130-01-36A	VM120U-01-36A	VM130U-01-36A	VM122-M5-36A	VM132-M5-36A	VM-36A	78 g
	Twist selector (3 position)		3 port	5 port	3 port	5 port	3 port	5 port	—	111 g (Add to 2 basic units.)
		Red	VM131-01-35RA	VM151-01-35RA	VM131U-01-35RA	VM151U-01-35RA	VM133-M5-35RA	VM153-M5-35RA		
		Black	VM131-01-35BA	VM151-01-35BA	VM131U-01-35BA	VM151U-01-35BA	VM133-M5-35BA	VM153-M5-35BA		
		Green	VM131-01-35GA	VM151-01-35GA	VM131U-01-35GA	VM151U-01-35GA	VM133-M5-35GA	VM153-M5-35GA		
		Yellow	VM131-01-35YA	VM151-01-35YA	VM131U-01-35YA	VM151U-01-35YA	VM133-M5-35YA	VM153-M5-35YA		

Note 1) It is possible to change the actuator assembly and mount to basic type when an actuator part number is specified in the column.

Note 2) For push button (mushroom), push button (flush), push button (extended) and individual fastening ring, refer to page 25.

Note 3) The handle of the selector (2 position and 3 position) cannot be removed or replaced alone.

Note 4) Colour of plunger: Grey (2 port), White (3 port)

A more compact and lightweight VM100F series with a built-in One-touch fitting and resin body has been added.

How to Order

VM1 3 1 - 01 - 01 A - -

Number of ports

2	2 port
3	3 port
5	5 port (Twist selector 3 position only)

Piping direction and the height of plunger

	Side ported	Long
0		Short
	Bottom ported	Long
1		Short
2		
3		

Body option

—	Side mounting
U	With bottom mounting thread

Note) U: Applicable only to side ported type

Port size

01	R1/8	
N01	NPT1/8	Side ported only
F01	G1/8	
M5	M5 x 0.8	Bottom ported only

Actuator type*

Actuator type	Height of plunger	Side ported		Bottom ported	
		Long	Short	Long	Short
00	Basic	○	○	○	○
01	Roller lever	X	○	X	○
02	One way roller lever	X	○	X	○
05	Straight plunger	○	X	○	X
06	Roller plunger	○	X	○	X
07	Cross roller plunger	○	X	○	X
08	Toggle lever	○	X	○	X
30	Push button (Mushroom)	○	X	○	X
32	Push button (Extended)	○	X	○	X
33	Push button (Flush)	○	X	○	X
34	Twist selector (2 position)	○	X	○	X
36	Key selector (2 position)	○	X	○	X
35	Twist selector (3 position)	X	○	X	○

Combination possible: ○ Combination impossible: u

Made to Order (Pages 21, 22)

X207A	Alternate type, Mushroom push button
X219A	Push-lock turn-reset type, Mushroom push button

Note) Applicable only to push button (mushroom)

Bracket option

—	None
B	With bracket

Note) Applicable only to side ported, side mounting type.
However, not applicable to twist selector (3 position).
Bracket is shipped together, but not assembled.

Suffix for indicator

—	None
Z	With miniature indicator

Note) Applicable only to bottom ported type

Suffix for actuator*


S	Hard steel roller
R	Red
B	Black
G	Green
Y	Yellow

Colour of push button, selector


* Refer to the table on page 1 for combinations of actuator type and suffix.

Construction


Side ported

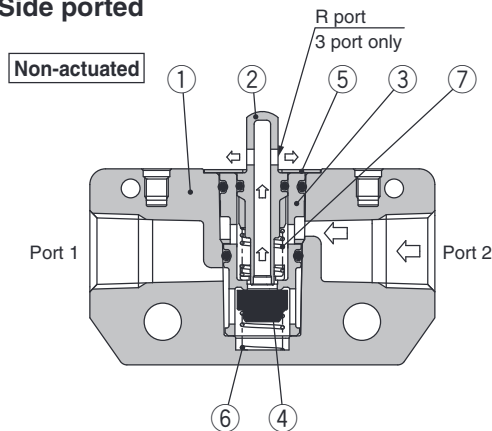


Actuated

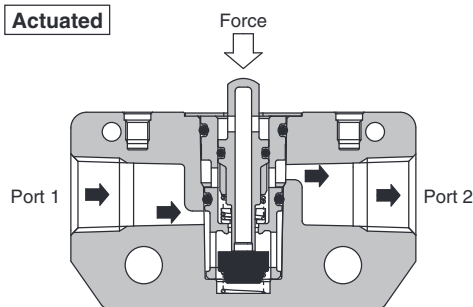

Bottom ported

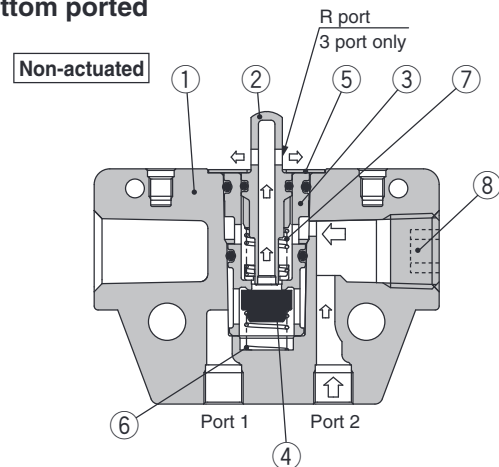

Actuated

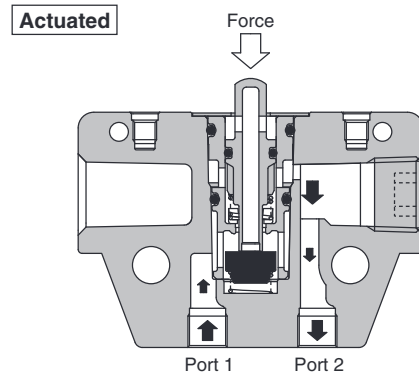

Component Parts

No.	Description	Material	Note
1	Valve	ZDC	White coated
2	Plunger	Polyacetal	2 port Grey 3 port White
3	Valve sheet	PBT	
4	Valve	NBR	


No.	Description	Material	Note
5	Plunger retainer	Stainless steel	
6	Spring	Stainless steel	
7	Spring	Spring steel	
8	Hexagon socket head taper plug	Rolled steel	

Series VM100


Series VM100/Side Ported

Basic


VM120-01-00A
VM130-01-00A
VM121-01-00A
VM131-01-00A

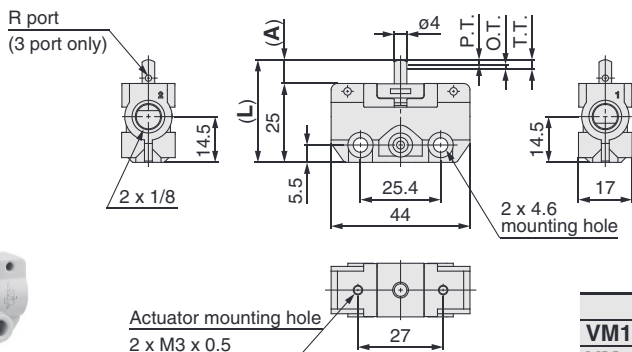

Symbol
2 port



3 port




Model	L	A
VM120-01-00A	37.5	7.5
VM130-01-00A		
VM121-01-00A	33.5	3.5
VM131-01-00A		

* 0.5 MPa supply


F.O.F.*	26 N
P.T.	1.5 mm
O.T.	1.5 mm
T.T.	3 mm

Roller lever


VM121-01-01A
VM131-01-01A
VM121-01-01SA
VM131-01-01SA

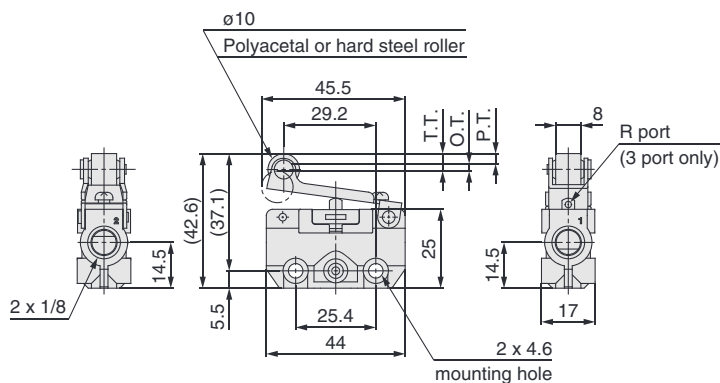

Symbol
2 port



3 port




* 0.5 MPa supply


F.O.F.*	13 N
P.T.	3.2 mm
O.T.	2.3 mm
T.T.	5.5 mm

One way roller lever


VM121-01-02A
VM131-01-02A
VM121-01-02SA
VM131-01-02SA

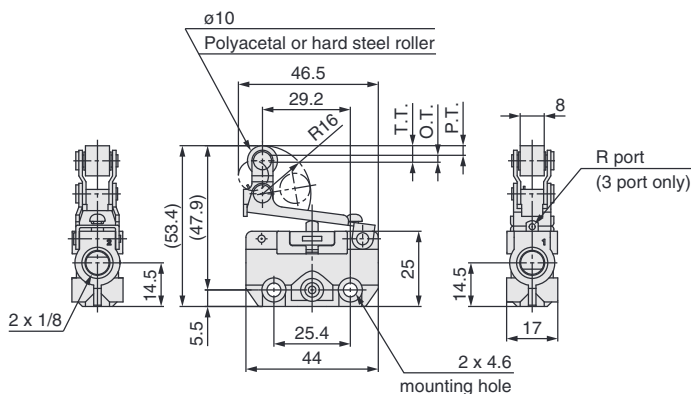

Symbol
2 port



3 port




* 0.5 MPa supply


F.O.F.*	13 N
P.T.	3.2 mm
O.T.	2.3 mm
T.T.	5.5 mm

Straight plunger


VM120-01-05A
VM130-01-05A

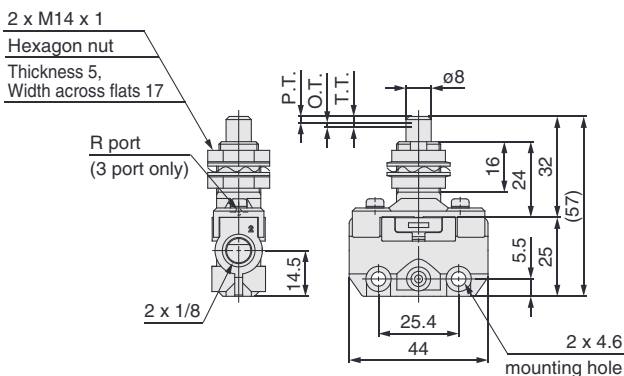


Panel mounting hole



Symbol
2 port



3 port




* 0.5 MPa supply

F.O.F.*	29 N
P.T.	2 mm
O.T.	1.5 mm
T.T.	3.5 mm


Series VM100/Side Ported

Roller plunger


VM120-01-06A
VM130-01-06A
VM120-01-06SA
VM130-01-06SA

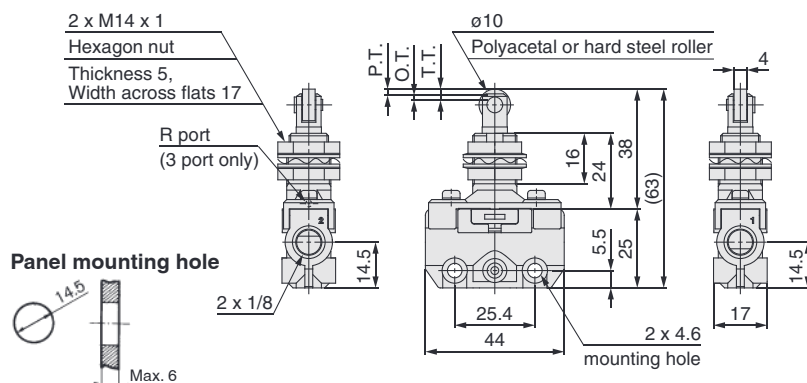

Symbol
2 port



3 port




* 0.5 MPa supply


F.O.F.*	29 N
P.T.	2 mm
O.T.	1.5 mm
T.T.	3.5 mm

Cross roller plunger


VM120-01-07A
VM130-01-07A
VM120-01-07SA
VM130-01-07SA

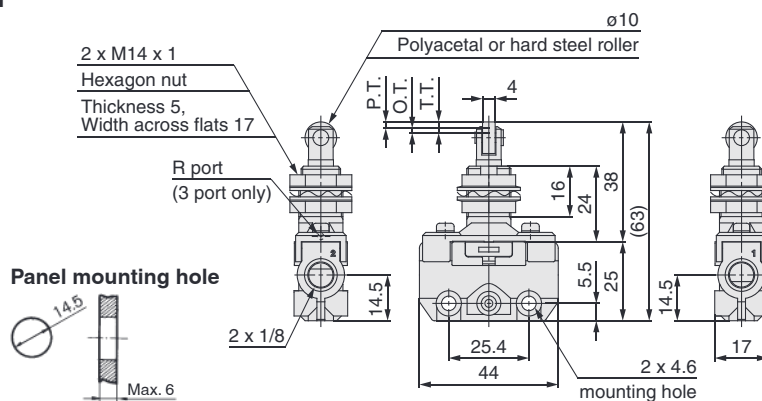

Symbol
2 port



3 port




* 0.5 MPa supply


F.O.F.*	29 N
P.T.	2 mm
O.T.	1.5 mm
T.T.	3.5 mm

Toggle lever


VM120-01-08A
VM130-01-08A

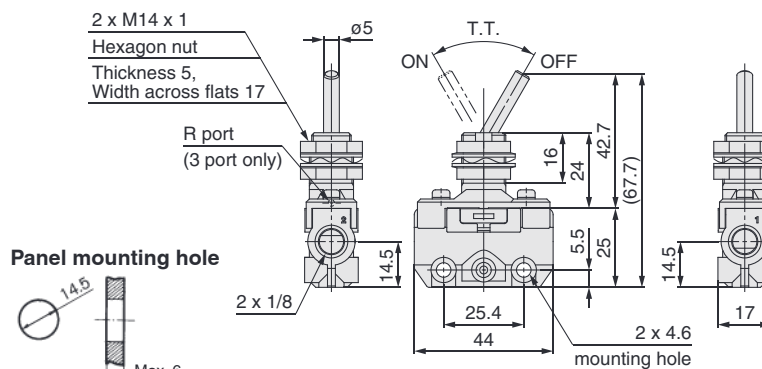

Symbol
2 port



3 port




* 0.5 MPa supply


F.O.F.*	13 N
T.T.	60°

Push button (Mushroom)


VM120-01-30 (R, B, G, Y) A
VM130-01-30 (R, B, G, Y) A

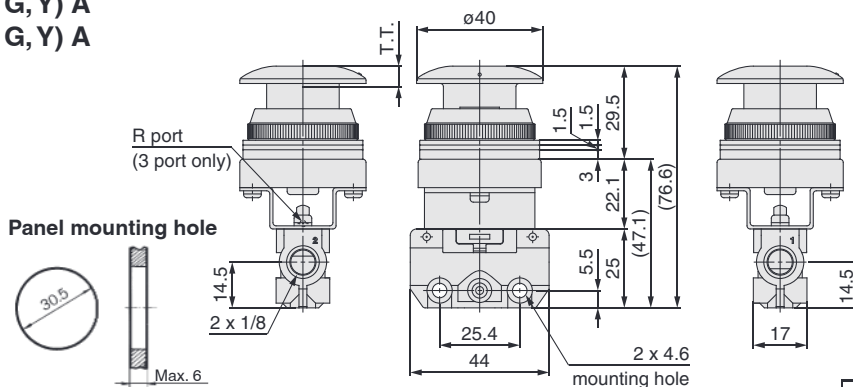

Symbol
2 port



3 port



* 0.5 MPa supply

F.O.F.*	27 N
T.T.	6.5 mm


Series VM100

Series VM100/Side Ported


Push button (Extended)

VM120-01-32 (R, B, G, Y) A

VM130-01-32 (R, B, G, Y) A

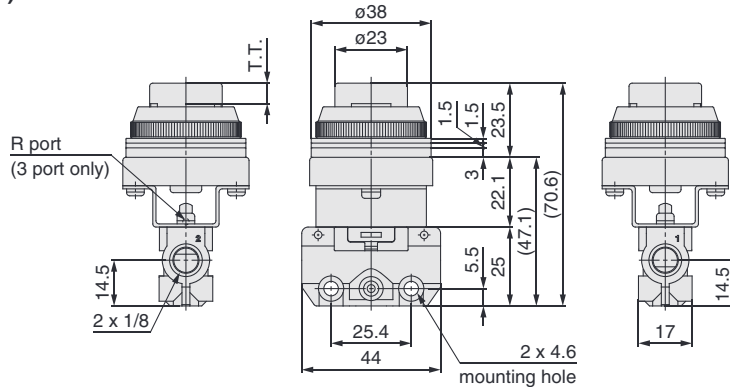


Panel mounting hole

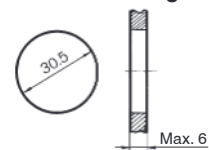


Symbol

2 port



3 port




* 0.5 MPa supply

F.O.F.*	27 N
T.T.	6.5 mm


Push button (Flush)

VM120-01-33A

VM130-01-33A

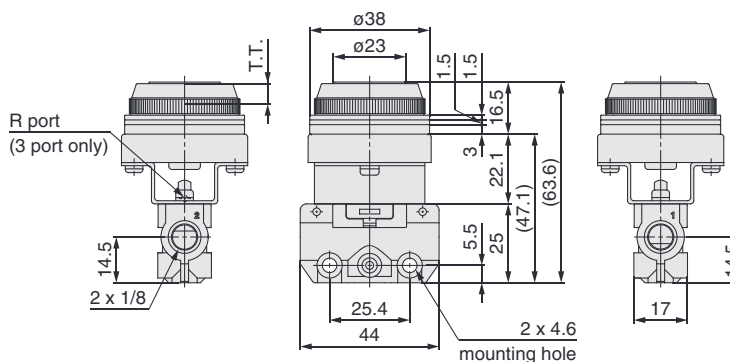


Panel mounting hole

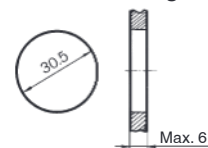


Symbol

2 port



3 port




* 0.5 MPa supply

F.O.F.*	27 N
T.T.	6.5 mm


Twist selector (2 position)

VM120-01-34 (R, B, G, Y) A

VM130-01-34 (R, B, G, Y) A

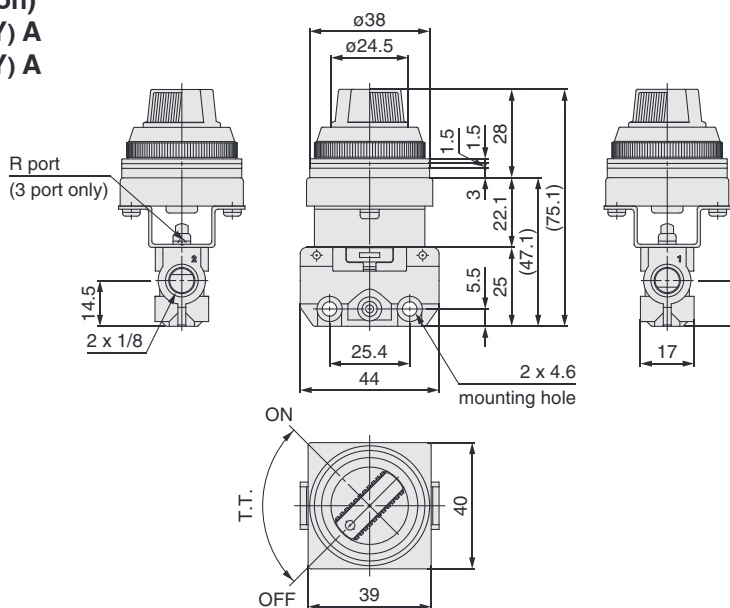


Panel mounting hole

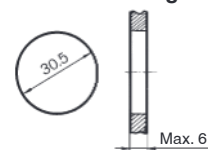


Symbol

2 port



3 port



* 0.5 MPa supply


F.O.F.*	15 N
T.T.	90°

Series VM100/Side Ported


Key selector (2 position)

VM120-01-36A

VM130-01-36A

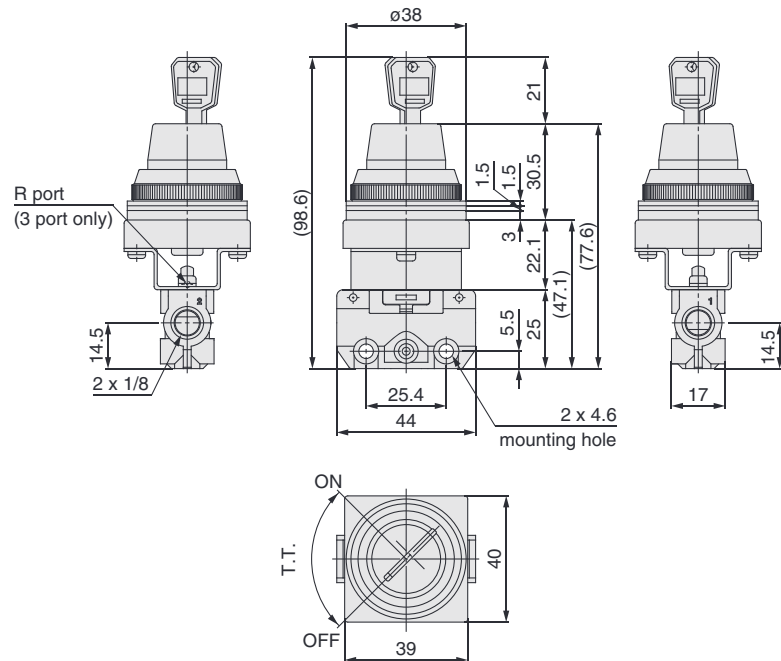


Panel mounting hole

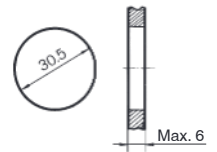


Symbol

2 port



3 port



Key can be removed at the "on" and "off" positions.
One spare key is included.


* 0.5 MPa supply

F.O.F.*	15 N
T.T.	90°


Twist selector (3 position)

VM131-01-35 (R, B, G, Y) A

VM151-01-35 (R, B, G, Y) A

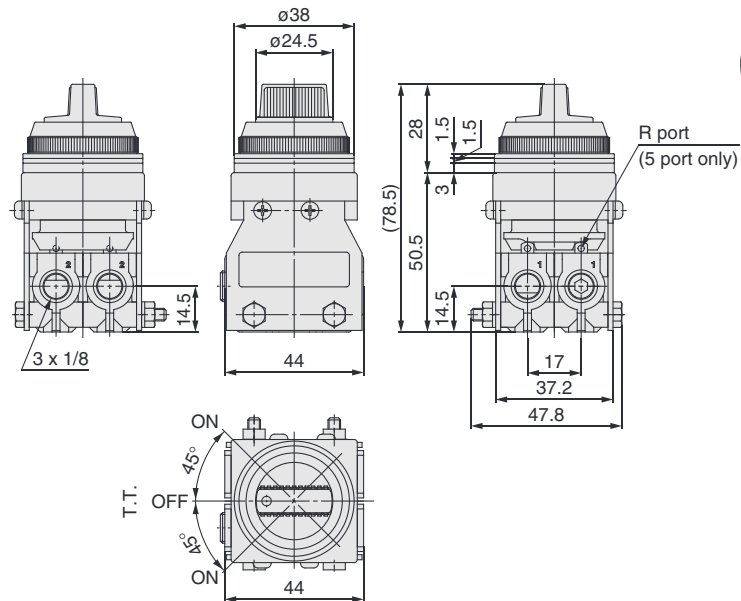


Panel mounting hole

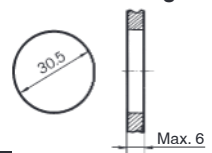


Symbol

3 port



5 port



* 0.5 MPa supply

F.O.F.*	20 N
T.T.	45°

Series VM100

Series VM100/Side Ported


With bracket

VM120-01-□A-B

VM130-01-□A-B

VM121-01-□A-B

VM131-01-□A-B

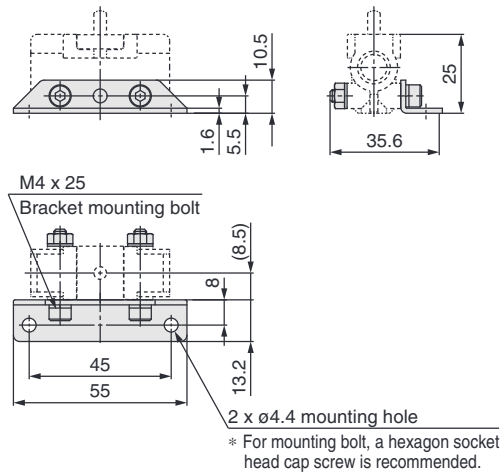

VM1-B

Component parts	Q'ty
Bracket	1
Hexagon socket head cap screw M4 x 25	2
Hexagon nut M4	2


With bottom mounting thread

VM120U-01-□A

VM130U-01-□A



VM121U-01-□A

VM131U-01-□A

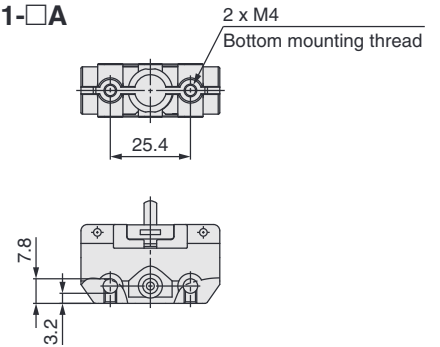

VM131U-01-35□A

VM151U-01-35□A

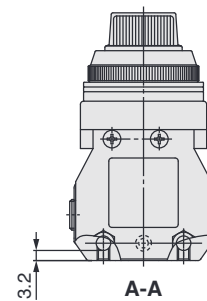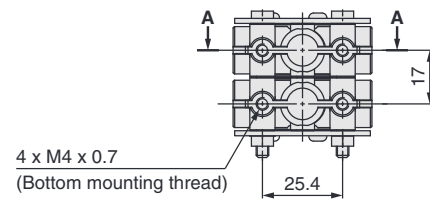

Series VM100/Bottom Ported


Basic

VM122-M5-00A

VM132-M5-00A


VM123-M5-00A

VM133-M5-00A

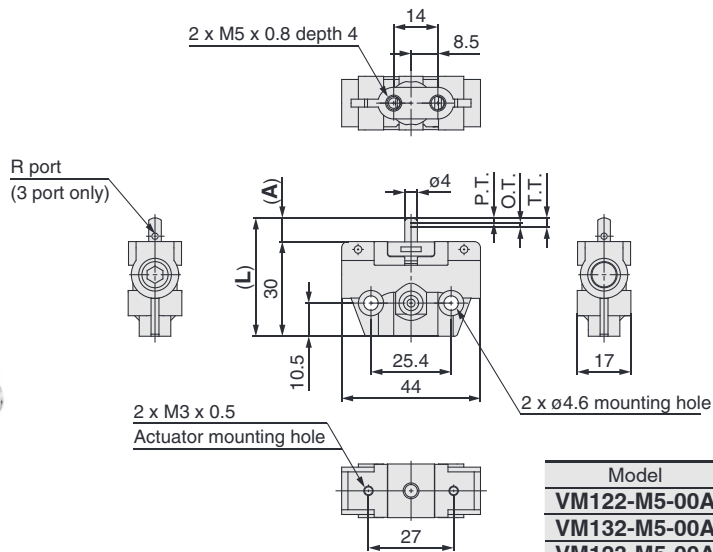


Symbol


2 port



3 port



With miniature indicator

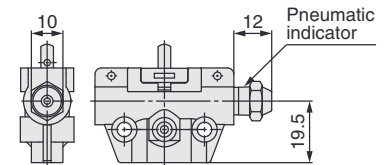

Model	L	A
VM122-M5-00A	37.5	7.5
VM132-M5-00A	37.5	7.5
VM123-M5-00A	33.5	3.5
VM133-M5-00A	33.5	3.5

* 0.5 MPa supply

F.O.F.*	26 N
P.T.	1.5 mm
O.T.	1.5 mm
T.T.	3 mm


Roller lever

VM123-M5-01A

VM133-M5-01A


VM123-M5-01SA

VM133-M5-01SA

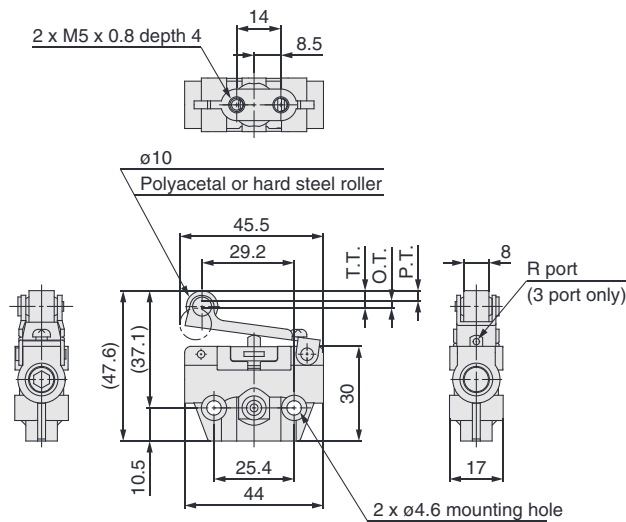


Symbol

2 port



3 port



* 0.5 MPa supply

F.O.F.*	13 N
P.T.	3.2 mm
O.T.	2.3 mm
T.T.	5.5 mm


One way roller lever

VM123-M5-02A

VM133-M5-02A


VM123-M5-02SA

VM133-M5-02SA

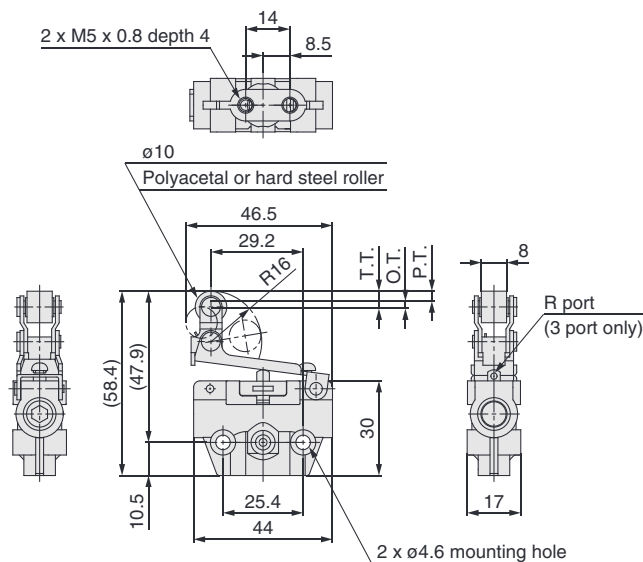


Symbol

2 port



3 port




* 0.5 MPa supply

F.O.F.*	13 N
P.T.	3.2 mm
O.T.	2.3 mm
T.T.	5.5 mm


Series VM100

Series VM100/Bottom Ported



Straight plunger VM122-M5-05A VM132-M5-05A

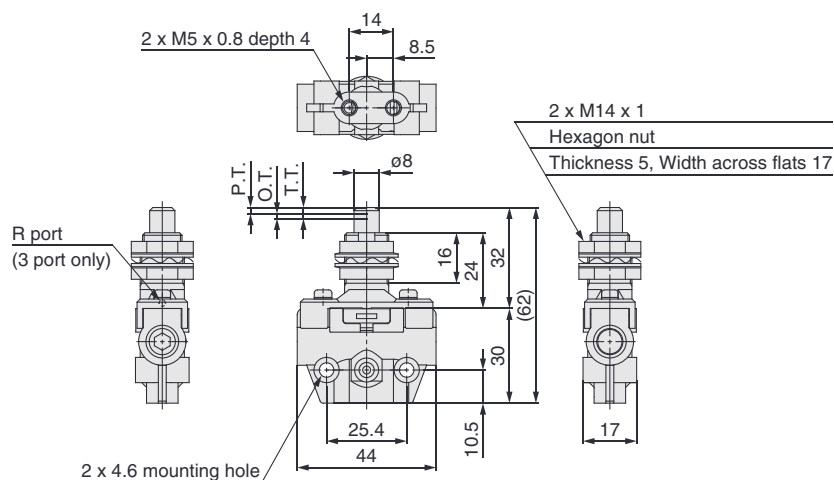

Panel mounting hole




Symbol




* 0.5 MPa supply

F.O.F.*	29 N
P.T.	2 mm
O.T.	1.5 mm
T.T.	3.5 mm


Roller plunger VM122-M5-06A VM132-M5-06A VM122-M5-06SA VM132-M5-06SA

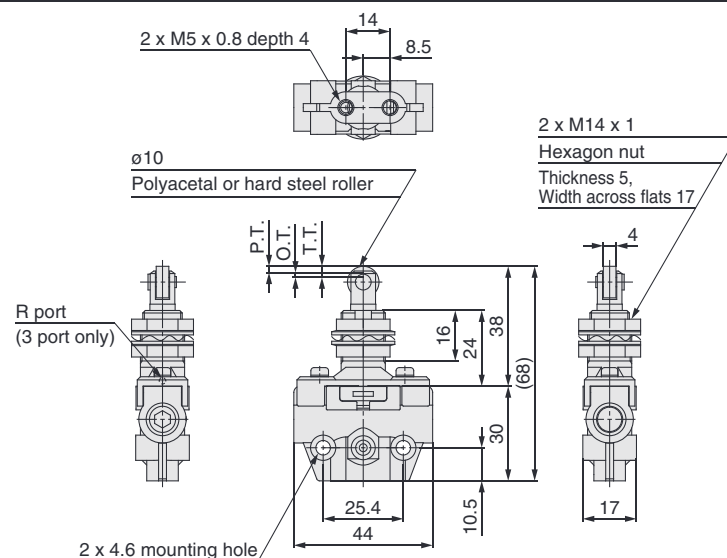

Panel mounting hole




Symbol




* 0.5 MPa supply

F.O.F.*	29 N
P.T.	2 mm
O.T.	1.5 mm
T.T.	3.5 mm


Cross roller plunger VM122-M5-07A VM132-M5-07A VM122-M5-07SA VM132-M5-07SA

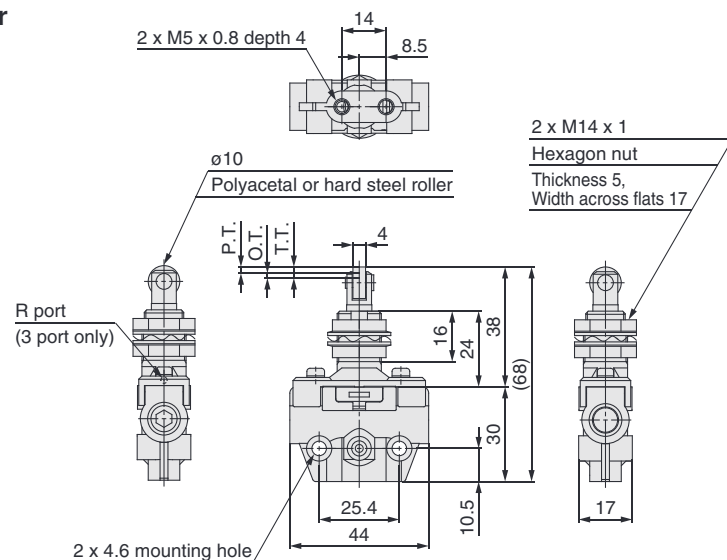

Panel mounting hole



Symbol



* 0.5 MPa supply


F.O.F.*	29 N
P.T.	2 mm
O.T.	1.5 mm
T.T.	3.5 mm

Series VM100/Bottom Ported

Toggle lever

VM122-M5-08A


VM132-M5-08A

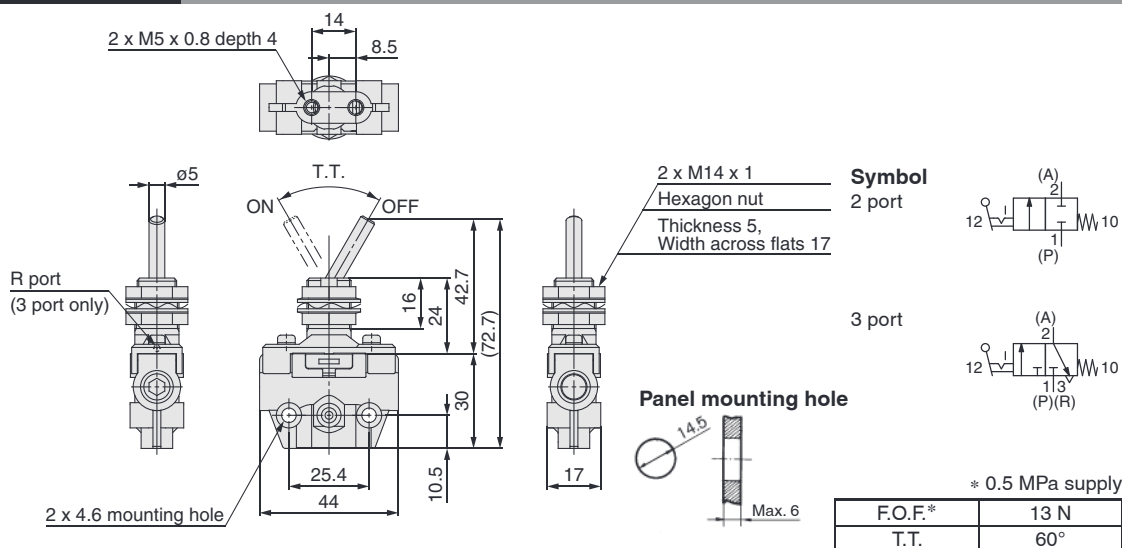

Push button (Mushroom)

VM122-M5-30 (R, B, G, Y) A


VM132-M5-30 (R, B, G, Y) A

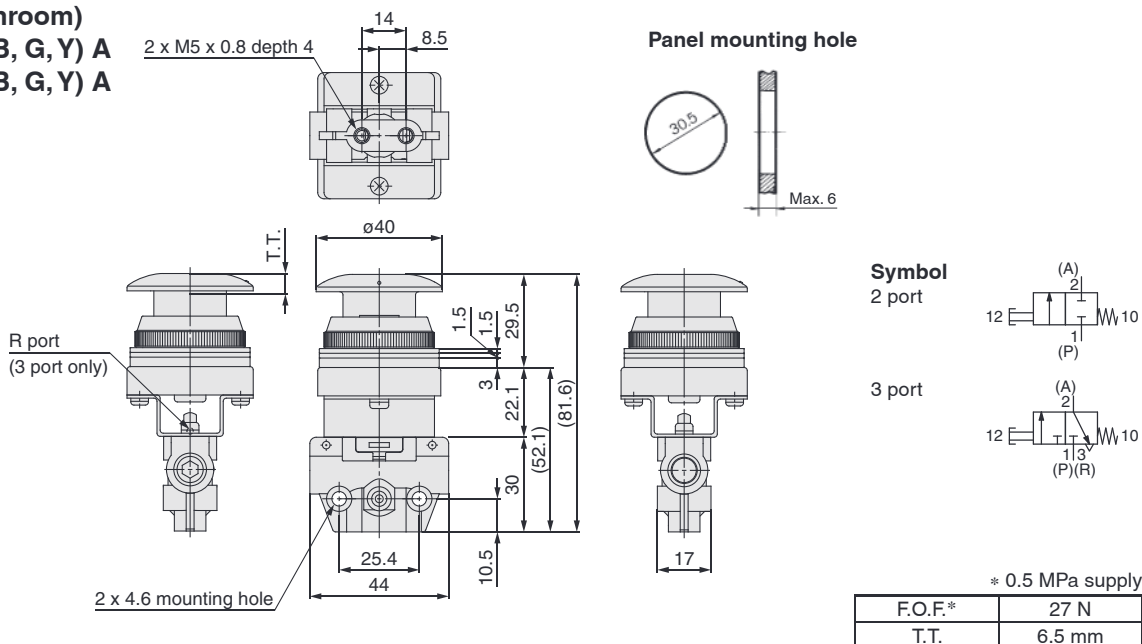

Push button (Extended)

VM122-M5-32 (R, B, G, Y) A


VM132-M5-32 (R, B, G, Y) A

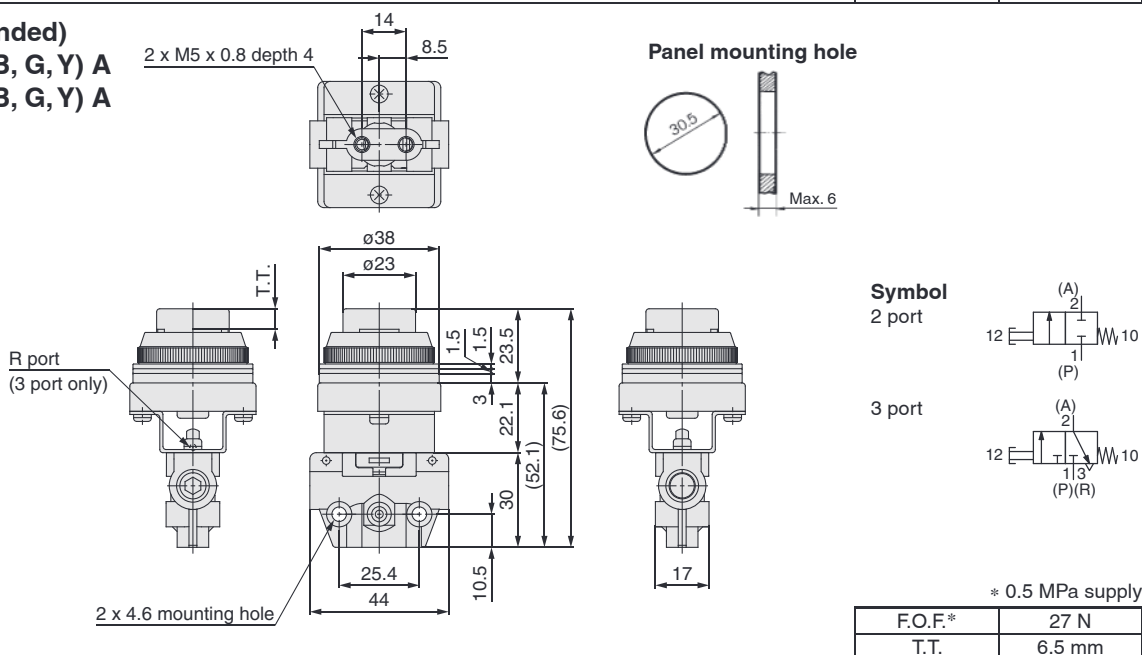


Series VM100

Series VM100/Bottom Ported


Push button (Flush)
VM122-M5-33A
VM132-M5-33A

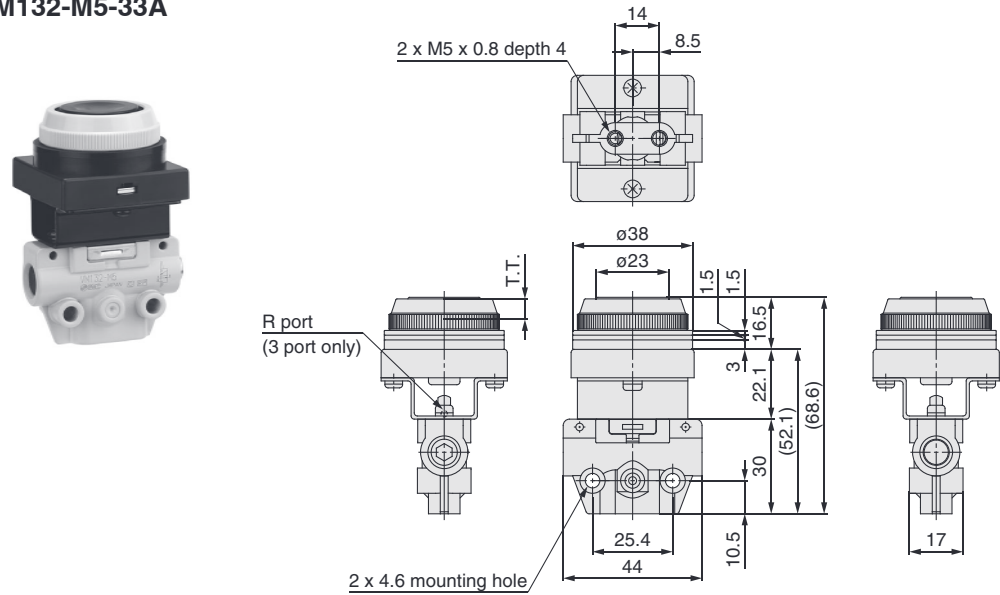


Panel mounting hole

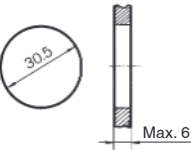

Symbol
2 port




3 port




* 0.5 MPa supply

F.O.F.*	27 N
T.T.	6.5 mm


Twist selector (2 position)
VM122-M5-34 (R, B, G, Y) A
VM132-M5-34 (R, B, G, Y) A

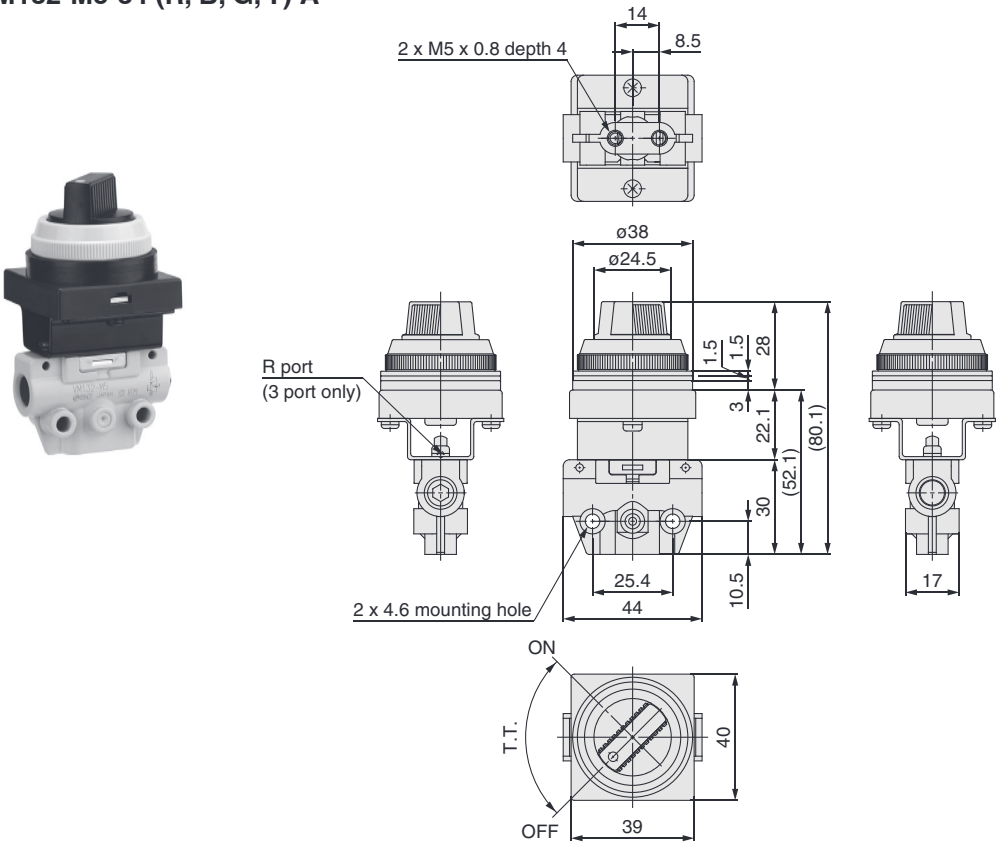


Panel mounting hole

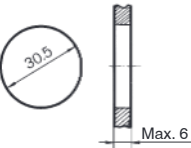

Symbol
2 port



3 port



* 0.5 MPa supply


F.O.F.*	15 N
T.T.	90°

Series VM100/Bottom Ported


Key selector (2 position)

VM122-M5-36A

VM132-M5-36A

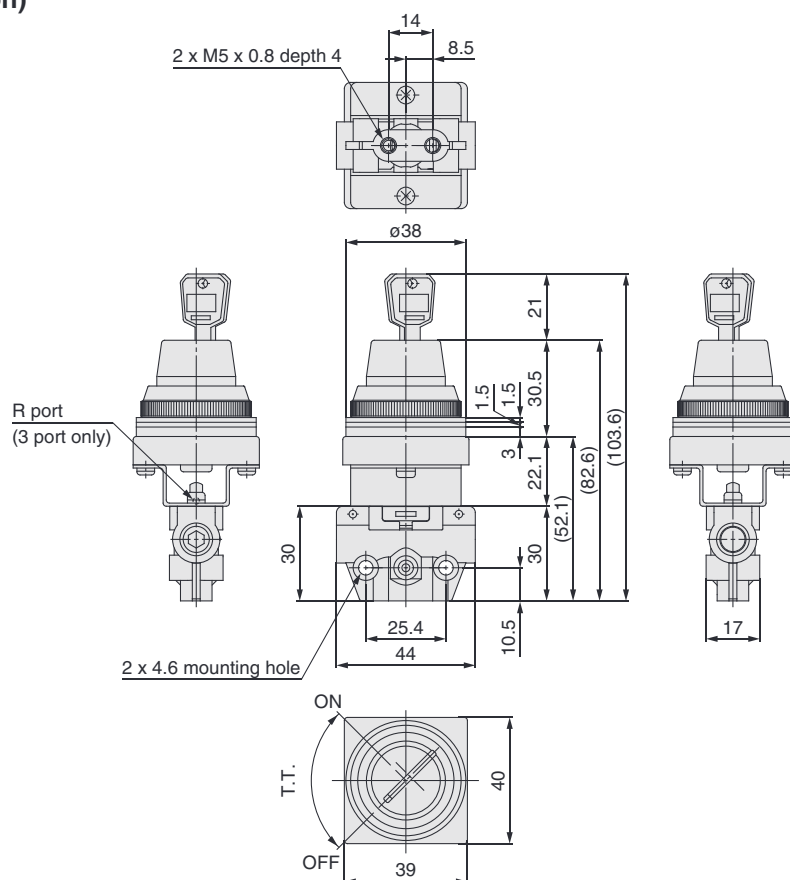


Panel mounting hole

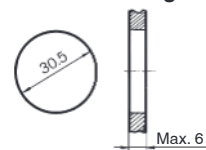

Symbol



3 port



Key can be removed at the "on" and "off" positions.
One spare key is included.


* 0.5 MPa supply

F.O.F.*	15 N
T.T.	90°


Twist selector (3 position)

VM133-M5-35 (R, B, G, Y) A


VM153-M5-35 (R, B, G, Y) A

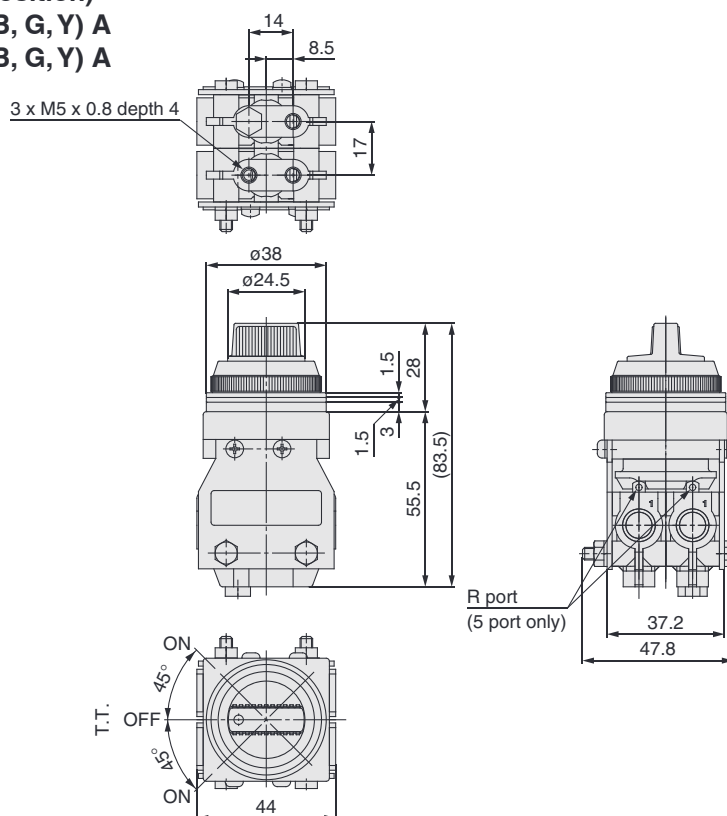


Panel mounting hole

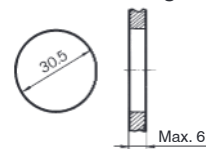

Symbol

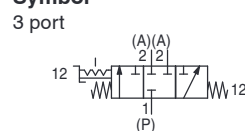

5 port

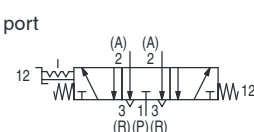

* 0.5 MPa supply

F.O.F.*	20 N
T.T.	45°

2/3 Port Mechanical Valve

Series VM200

RoHS

- Large flow capacity
- Possible to choose mounting method:
Side mounting, bottom mounting using screws, or mounting with special bracket
- A variety of actuator types



Specifications

Fluid	Air/Inert gas	
Operating pressure range	0 to 1 MPa	
Ambient and fluid temperature	-5 to 60°C (No freezing)	
Flow-rate characteristics	1 (P) → 2 (A)	2 (A) → 3 (R)
C [dm ³ /(s·bar)]	4	3.5
b	0.4	0.1
Cv	0.87	0.69
Q [l/min] (ANR) ^{Note 1)}	1088	795
Lubrication ^{Note 2)}	Not required	
Port size	1/4	
Weight (Basic)	90 g	
Bracket part number ^{Note 3)}	VM2-B	

Note 1) These values have been calculated according to ISO6358 and indicate the flow rate under standard conditions with and inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.

Note 2) Use turbine oil Class 1 ISO VG32, if lubricated.

Note 3) The bracket can only be used for side mounting of side ported type.

Model

	Piping direction		Side ported				Actuator	
	Body option		Standard		With bottom mounting thread		Actuator part number	Additional weight for actuator
	Number of ports		2 port	3 port	2 port	3 port		
Mechanical operation	Basic		VM220-02-00A	VM230-02-00A	VM220U-02-00A	VM230U-02-00A	—	—
	Roller lever	Polyacetal roller	VM220-02-01A	VM230-02-01A	VM220U-02-01A	VM230U-02-01A	VM-01A	50 g
		Hard steel roller	VM220-02-01SA	VM230-02-01SA	VM220U-02-01SA	VM230U-02-01SA	VM-01AS	60 g
	One way roller lever	Polyacetal roller	VM220-02-02A	VM230-02-02A	VM220U-02-02A	VM230U-02-02A	VM-02A	60 g
		Hard steel roller	VM220-02-02SA	VM230-02-02SA	VM220U-02-02SA	VM230U-02-02SA	VM-02AS	70 g
	Straight plunger		VM220-02-05A	VM230-02-05A	VM220U-02-05A	VM230U-02-05A	VM-05A	130 g
	Roller plunger	Polyacetal roller	VM220-02-06A	VM230-02-06A	VM220U-02-06A	VM230U-02-06A	VM-06A	120 g
		Hard steel roller	VM220-02-06SA	VM230-02-06SA	VM220U-02-06SA	VM230U-02-06SA	VM-06AS	130 g
	Cross roller plunger	Polyacetal roller	VM220-02-07A	VM230-02-07A	VM220U-02-07A	VM230U-02-07A	VM-07A	120 g
		Hard steel roller	VM220-02-07SA	VM230-02-07SA	VM220U-02-07SA	VM230U-02-07SA	VM-07AS	130 g
Manual operation	Toggle lever		VM220-02-08A	VM230-02-08A	VM220U-02-08A	VM230U-02-08A	VM-08A	110 g
	Push button (Mushroom)	Red	VM220-02-30RA	VM230-02-30RA	VM220U-02-30RA	VM230U-02-30RA	VM-30AR	58 g
		Black	VM220-02-30BA	VM230-02-30BA	VM220U-02-30BA	VM230U-02-30BA	VM-30AB	
		Green	VM220-02-30GA	VM230-02-30GA	VM220U-02-30GA	VM230U-02-30GA	VM-30AG	
		Yellow	VM220-02-30YA	VM230-02-30YA	VM220U-02-30YA	VM230U-02-30YA	VM-30AY	
	Push button (Extended)	Red	VM220-02-32RA	VM230-02-32RA	VM220U-02-32RA	VM230U-02-32RA	VM-32AR	52 g
		Black	VM220-02-32BA	VM230-02-32BA	VM220U-02-32BA	VM230U-02-32BA	VM-32AB	
		Green	VM220-02-32GA	VM230-02-32GA	VM220U-02-32GA	VM230U-02-32GA	VM-32AG	
		Yellow	VM220-02-32YA	VM230-02-32YA	VM220U-02-32YA	VM230U-02-32YA	VM-32AY	
	Push button (Flush)	With a set of red, black, green, yellow	VM220-02-33A	VM230-02-33A	VM220U-02-33A	VM230U-02-33A	VM-33A	50 g
	Twist selector (2 position)	Red	VM220-02-34RA	VM230-02-34RA	VM220U-02-34RA	VM230U-02-34RA	VM-34AR	56 g
		Black	VM220-02-34BA	VM230-02-34BA	VM220U-02-34BA	VM230U-02-34BA	VM-34AB	
		Green	VM220-02-34GA	VM230-02-34GA	VM220U-02-34GA	VM230U-02-34GA	VM-34AG	
		Yellow	VM220-02-34YA	VM230-02-34YA	VM220U-02-34YA	VM230U-02-34YA	VM-34AY	
	Key selector (2 position)		VM220-02-36A	VM230-02-36A	VM220U-02-36A	VM230U-02-36A	VM-36A	78 g
	Twist selector (3 position)		3 port	5 port	3 port	5 port	—	230 g (Add to 2 basic units.)
		Red	VM230-02-35RA	VM250-02-35RA	VM230U-02-35RA	VM250U-02-35RA		
		Black	VM230-02-35BA	VM250-02-35BA	VM230U-02-35BA	VM250U-02-35BA		
		Green	VM230-02-35GA	VM250-02-35GA	VM230U-02-35GA	VM250U-02-35GA		
		Yellow	VM230-02-35YA	VM250-02-35YA	VM230U-02-35YA	VM250U-02-35YA		
	Foot pedal		2 port	3 port	—	—	—	340 g
			VM220-02-40A	VM230-02-40A	—	—		

Note 1) It is possible to change the actuator assembly and mount to basic type when an actuator part number is specified in the column.

Note 2) For push button (mushroom), push button (flush), push button (extended) and individual fastening ring, refer to page 25.

Note 3) The handle of the selector (2 position and 3 position) cannot be removed or replaced alone.

Note 4) Color of plunger: Gray (2 port), White (3 port)

How to Order

VM2 3 0 - 02 - 01 S A - B -

Number of ports

2	2 port
3	3 port
5	5 port (Twist selector 3 position only)

Body option

—	Side mounting
U	With bottom mounting thread

Port size

02	R1/4
N02	NPT1/4
F02	G1/4

Actuator type*

00	Basic
01	Roller lever
02	One way roller lever
05	Straight plunger
06	Roller plunger
07	Cross roller plunger
08	Toggle lever
30	Push button (Mushroom)
32	Push button (Extended)
33	Push button (Flush)
34	Twist selector (2 position)
36	Key selector (2 position)
35	Twist selector (3 position)
40	Foot pedal

Made to Order (Pages 21, 22)

X207A	Alternate type, Mushroom push button
X219A	Push-lock turn-reset type, Mushroom push button

Note) Applicable only to push button (mushroom)

Bracket option

—	None
B	With bracket

Note) Applicable only to side mounting type.
However, not applicable to twist selector
(3 position) and foot pedal.
Bracket is shipped together, but not assembled.


Suffix for actuator*

S	Hard steel roller
R	Red
B	Black
G	Green
Y	Yellow

Colour of push button, selector

* Refer to the table on page 13 for combinations of actuator type and suffix.

Construction

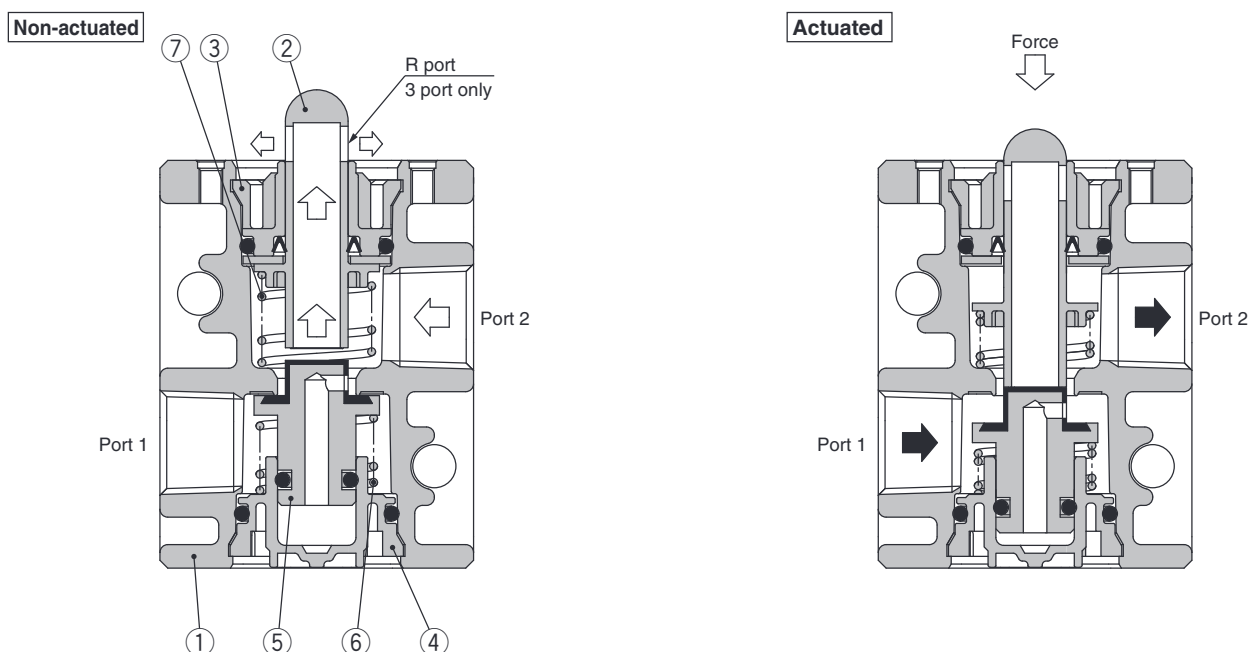

Component Parts

No.	Description	Material	Note
1	Valve	ADC	White coated
2	Plunger	Polyacetal	2 port Grey
			3 port White
3	Plunger retainer	PBT	
4	Cover	PBT	
5	Inner valve	NBR, Brass	
6	Spring	Stainless steel	
7	Spring	Spring steel	


Series VM200

Series VM200

Basic


VM220-02-00A

VM230-02-00A

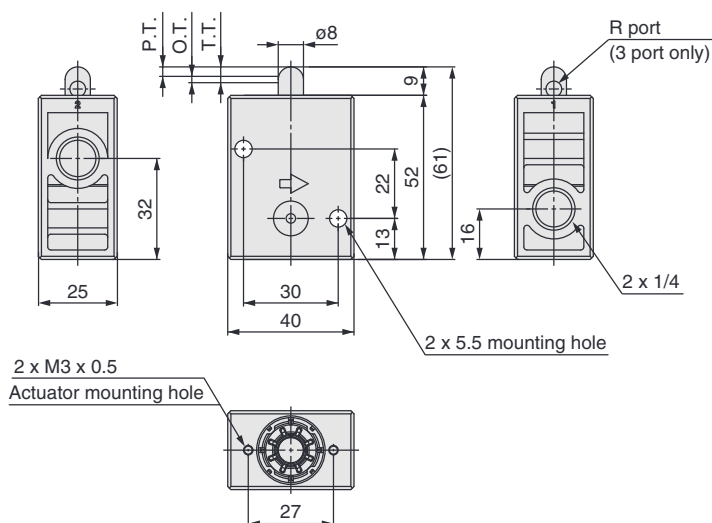


Symbol

2 port



3 port



* 0.5 MPa supply

F.O.F.*	52 N
P.T.	3 mm
O.T.	2 mm
T.T.	5 mm


Roller lever

VM220-02-01A

VM230-02-01A


VM220-02-01SA

VM230-02-01SA

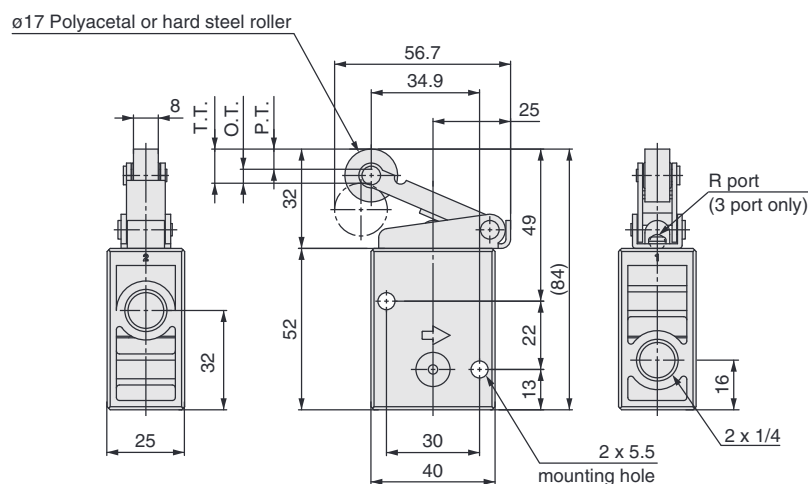


Symbol

2 port



3 port



* 0.5 MPa supply

F.O.F.*	24 N
P.T.	6.5 mm
O.T.	4.5 mm
T.T.	11 mm


One way roller lever

VM220-02-02A

VM230-02-02A


VM220-02-02SA

VM230-02-02SA

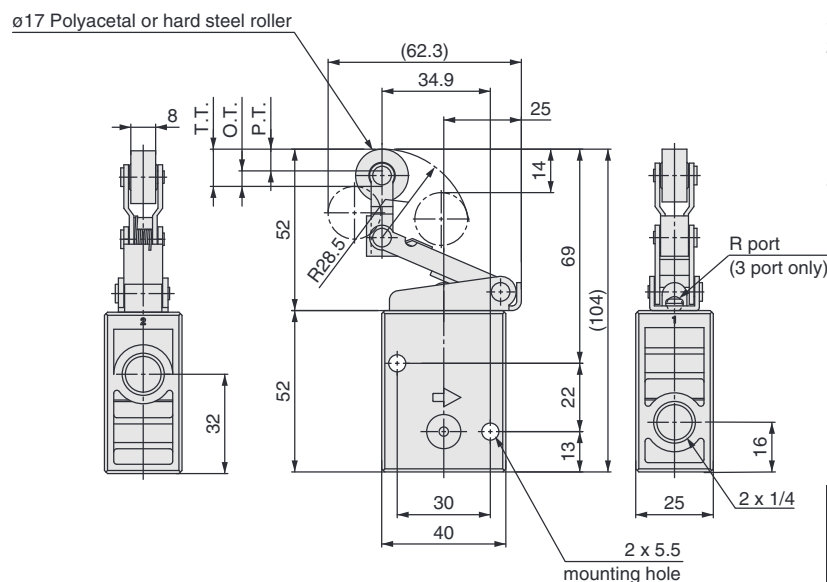


Symbol

2 port



3 port




* 0.5 MPa supply


F.O.F.*	22 N
P.T.	7 mm
O.T.	5 mm
T.T.	12 mm

Series VM200



Straight plunger VM220-02-05A VM230-02-05A

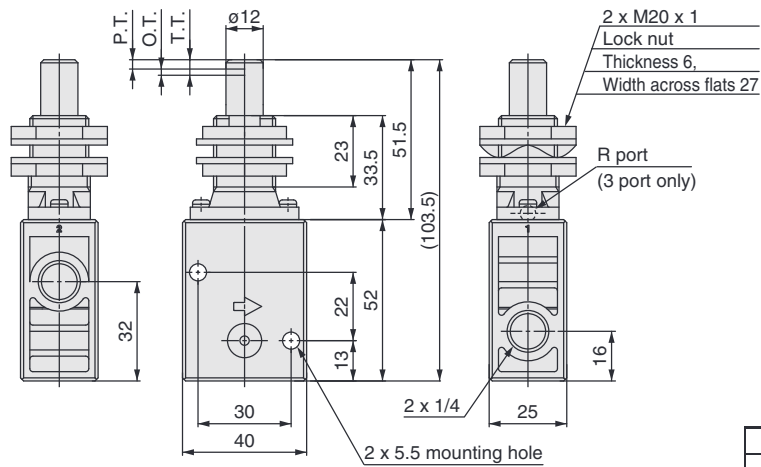

Panel mounting hole




Symbol

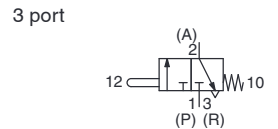


* 0.5 MPa supply

F.O.F.*	56 N
P.T.	3.5 mm
O.T.	2 mm
T.T.	5.5 mm



Roller plunger VM220-02-06A VM230-02-06A VM220-02-06SA VM230-02-06SA

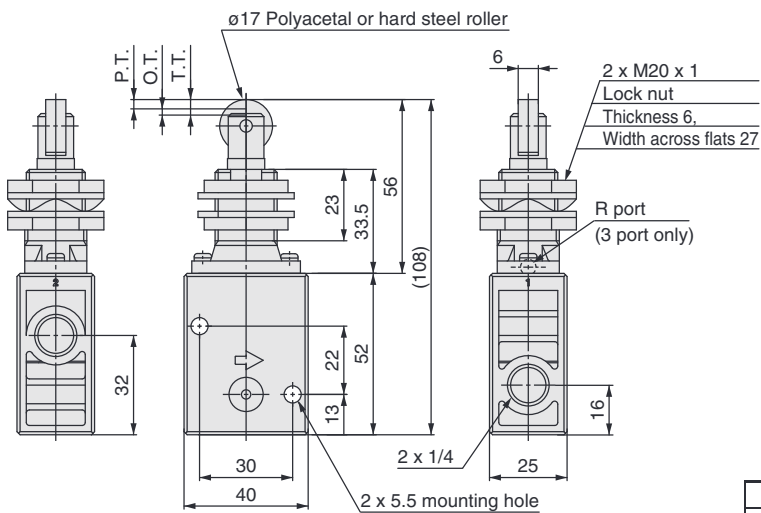

Panel mounting hole




Symbol




* 0.5 MPa supply

F.O.F.*	56 N
P.T.	3.5 mm
O.T.	2 mm
T.T.	5.5 mm



Cross roller plunger VM220-02-07A VM230-02-07A VM220-02-07SA VM230-02-07SA

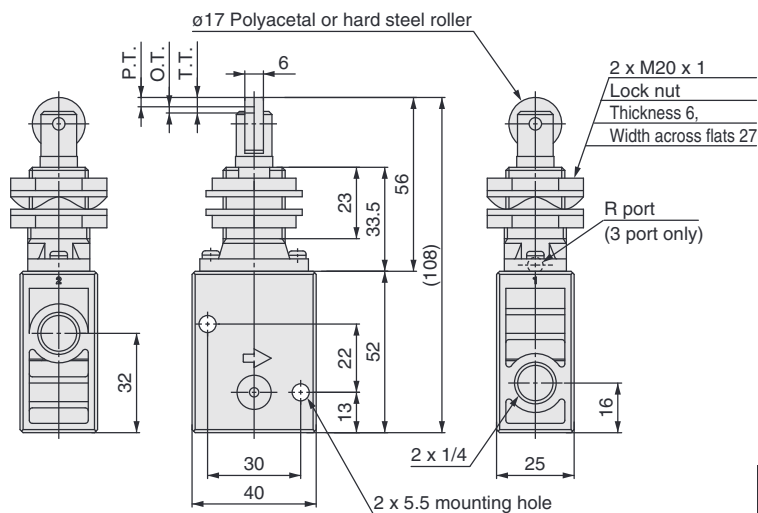

Panel mounting hole



Symbol



* 0.5 MPa supply

F.O.F.*	56 N
P.T.	3.5 mm
O.T.	2 mm
T.T.	5.5 mm


Series VM200

Series VM200

Basic


VM220-02-00A

VM230-02-00A

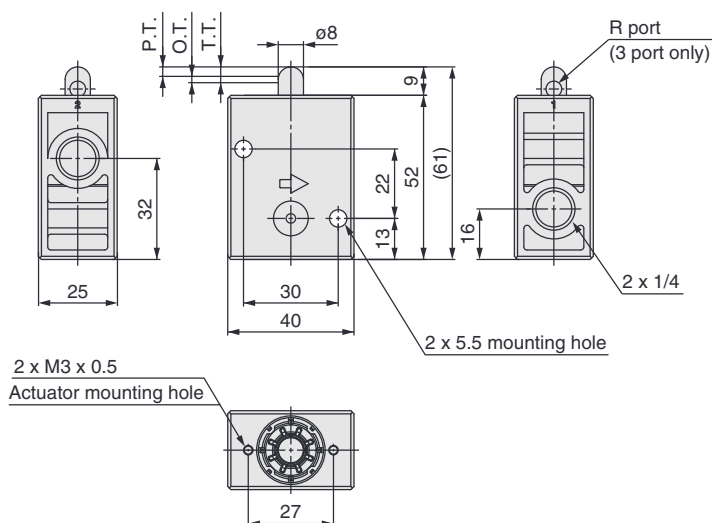


Symbol

2 port



3 port



* 0.5 MPa supply

F.O.F.*	52 N
P.T.	3 mm
O.T.	2 mm
T.T.	5 mm


Roller lever

VM220-02-01A

VM230-02-01A


VM220-02-01SA

VM230-02-01SA

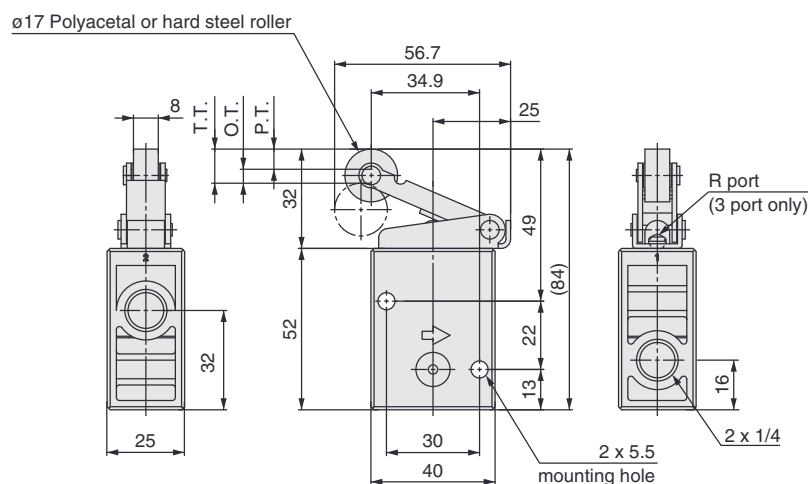


Symbol

2 port



3 port



* 0.5 MPa supply

F.O.F.*	24 N
P.T.	6.5 mm
O.T.	4.5 mm
T.T.	11 mm


One way roller lever

VM220-02-02A

VM230-02-02A


VM220-02-02SA

VM230-02-02SA

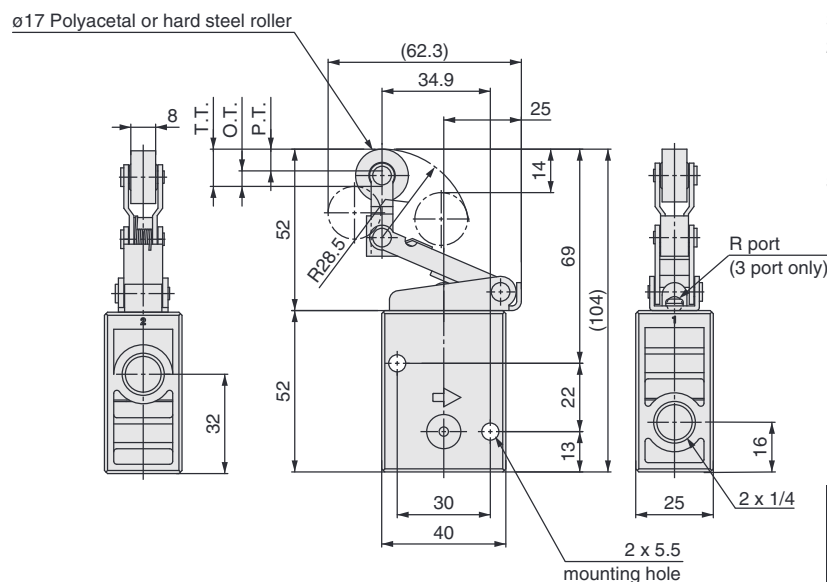


Symbol

2 port



3 port




* 0.5 MPa supply


F.O.F.*	22 N
P.T.	7 mm
O.T.	5 mm
T.T.	12 mm

Series VM200



Straight plunger VM220-02-05A VM230-02-05A

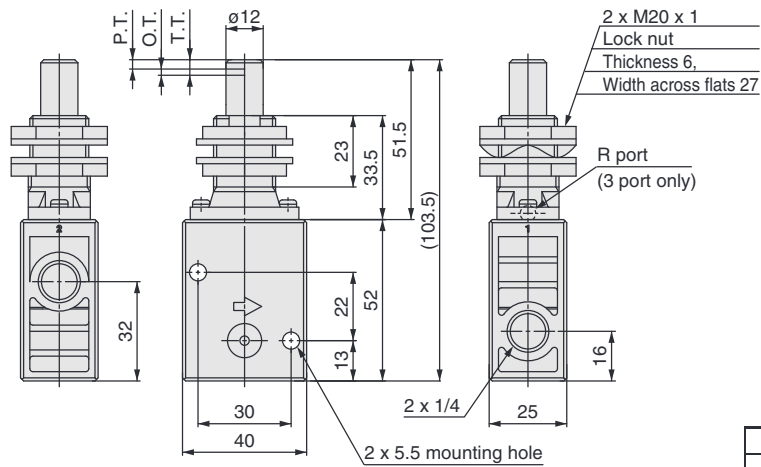

Panel mounting hole




Symbol

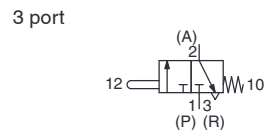


* 0.5 MPa supply

F.O.F.*	56 N
P.T.	3.5 mm
O.T.	2 mm
T.T.	5.5 mm



Roller plunger VM220-02-06A VM230-02-06A VM220-02-06SA VM230-02-06SA

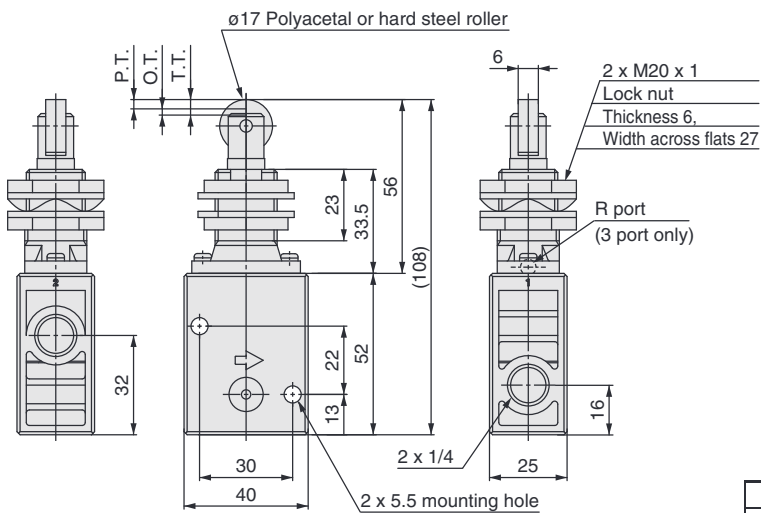

Panel mounting hole




Symbol



* 0.5 MPa supply

F.O.F.*	56 N
P.T.	3.5 mm
O.T.	2 mm
T.T.	5.5 mm



Cross roller plunger VM220-02-07A VM230-02-07A VM220-02-07SA VM230-02-07SA

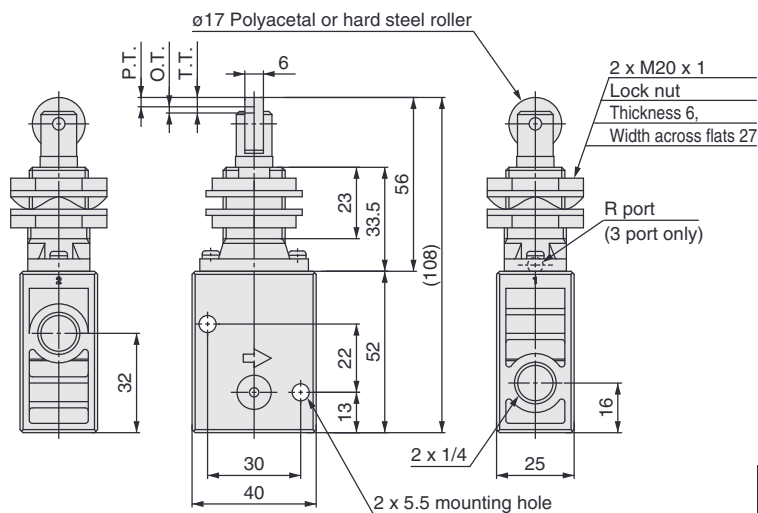

Panel mounting hole



Symbol




* 0.5 MPa supply

F.O.F.*	56 N
P.T.	3.5 mm
O.T.	2 mm
T.T.	5.5 mm


Series VM200

Series VM200

Toggle lever
VM220-02-08A
VM230-02-08A

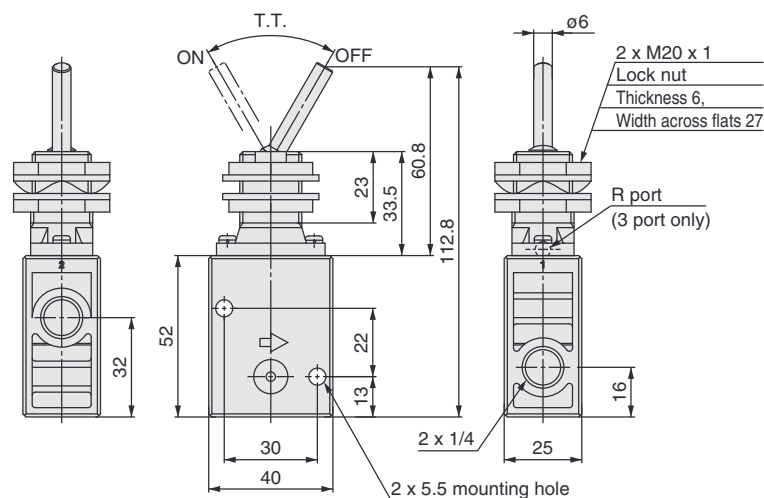


Panel mounting hole



Symbol




3 port




* 0.5 MPa supply

F.O.F.*	12 N
T.T.	60°


Push button (Mushroom)
VM220-02-30 (R, B, G, Y) A
VM230-02-30 (R, B, G, Y) A

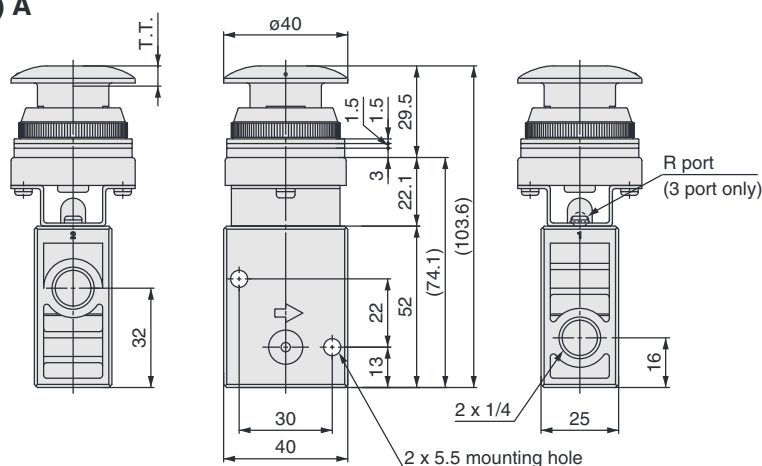


Panel mounting hole

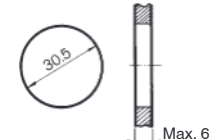

Symbol




3 port




* 0.5 MPa supply

F.O.F.*	52 N
T.T.	6.5 mm


Push button (Extended)
VM220-02-32 (R, B, G, Y) A
VM230-02-32 (R, B, G, Y) A

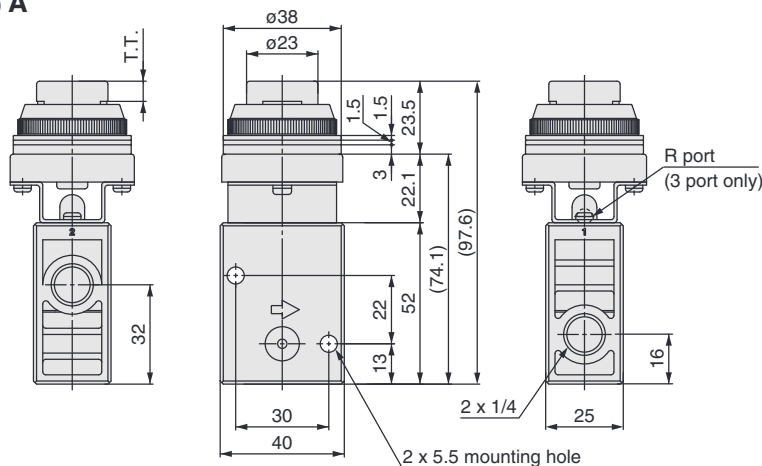


Panel mounting hole

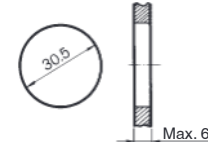

Symbol

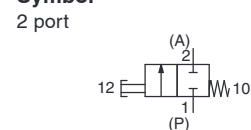

3 port



* 0.5 MPa supply


F.O.F.*	52 N
T.T.	6.5 mm

Series VM200


Push button (Flush)

VM220-02-33A

VM230-02-33A

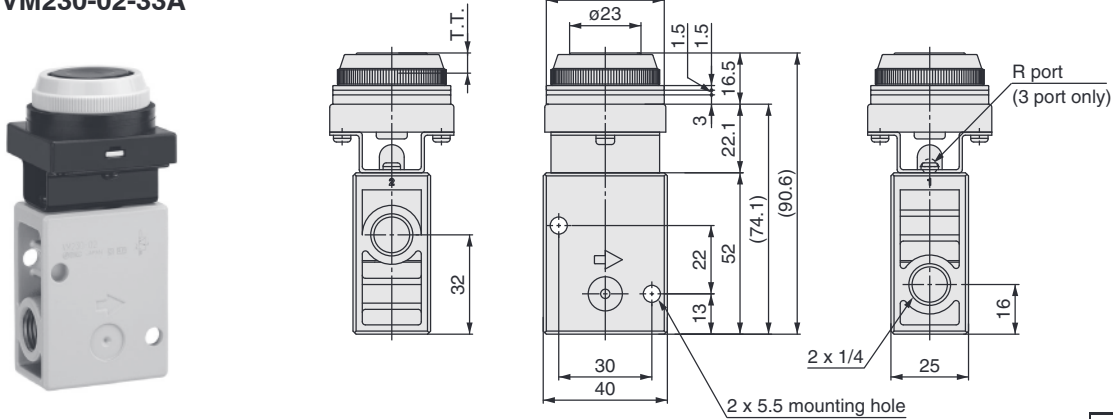


Panel mounting hole

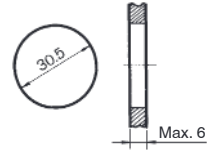


Symbol

2 port



3 port

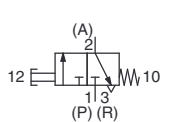


* 0.5 MPa supply

F.O.F.*	52 N
T.T.	6.5 mm


Twist selector (2 position)

VM220-02-34 (R, B, G, Y) A

VM230-02-34 (R, B, G, Y) A

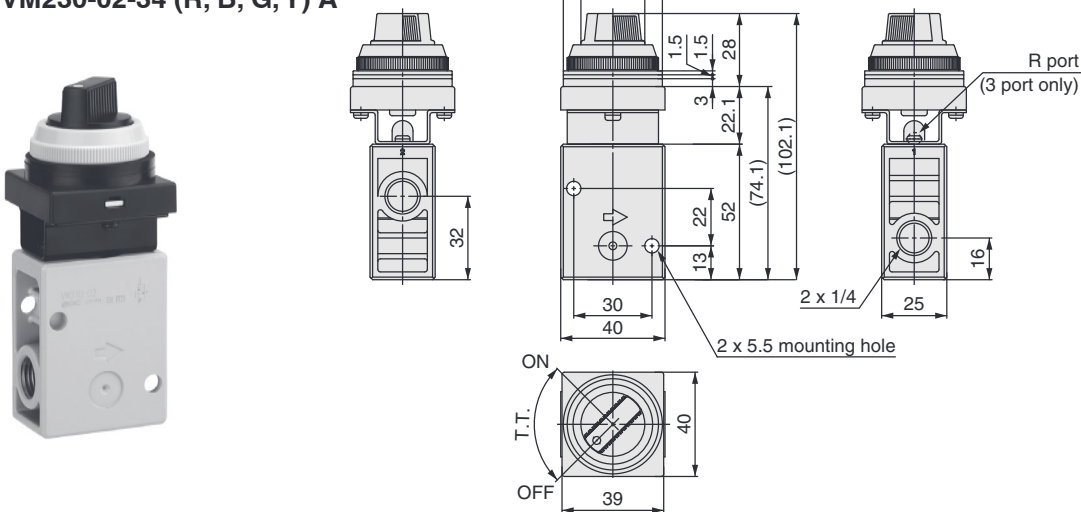


Panel mounting hole

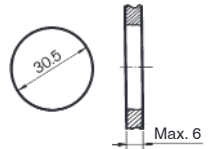


Symbol

2 port



3 port




* 0.5 MPa supply

F.O.F.*	32 N
T.T.	90°


Key selector (2 position)

VM220-02-36A

VM230-02-36A

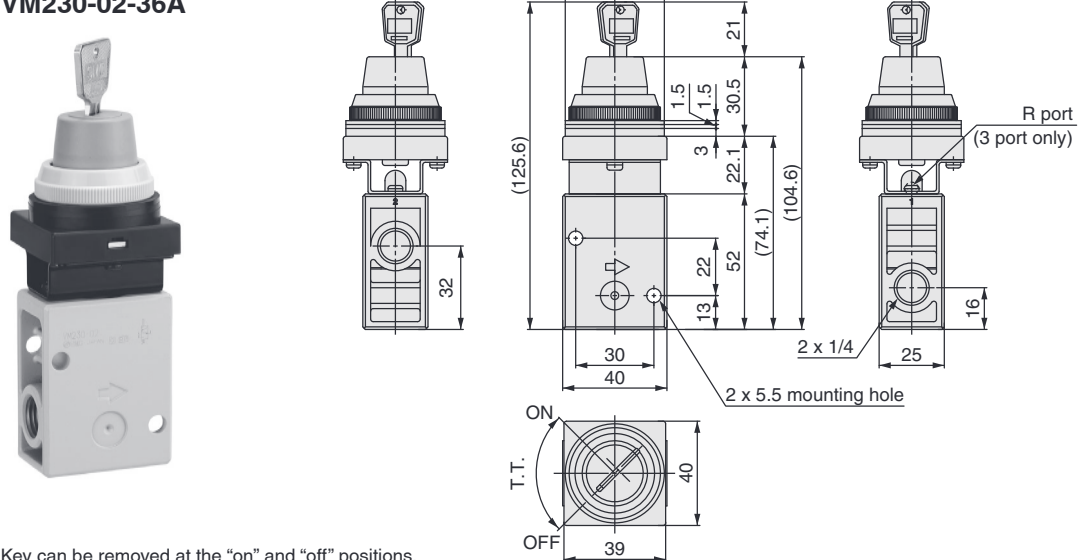


Panel mounting hole

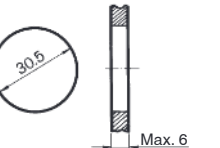


Symbol

2 port



3 port



* 0.5 MPa supply


F.O.F.*	32 N
T.T.	90°

Key can be removed at the "on" and "off" positions.
One spare key is included.


Series VM200

Series VM200


Twist selector (3 position)
VM230-02-35 (R, B, G, Y) A
VM250-02-35 (R, B, G, Y) A

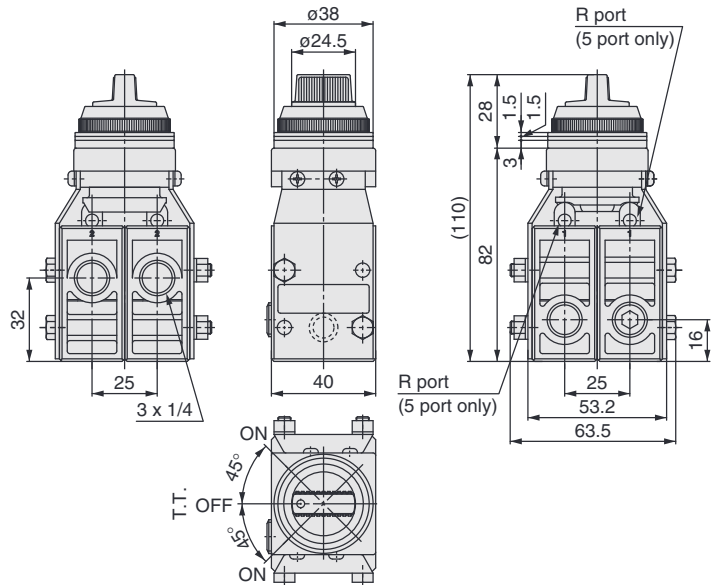

Panel mounting hole

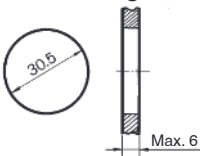


Symbol

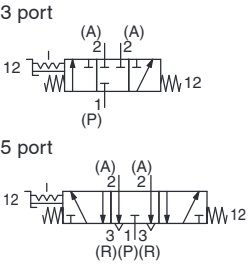


* 0.5 MPa supply

F.O.F.*	40 N
T.T.	45°

Foot pedal
VM220-02-40A
VM230-02-40A

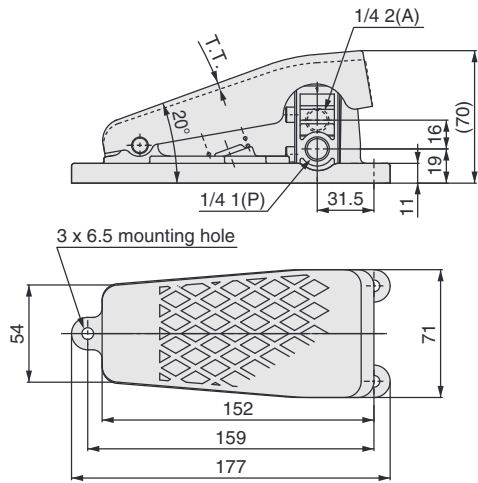

Symbol

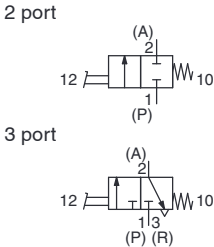

* 0.5 MPa supply


F.O.F.*	65 N
T.T.	1.2°

Series VM200

With bracket

VM220-02-□A-B

VM230-02-□A-B

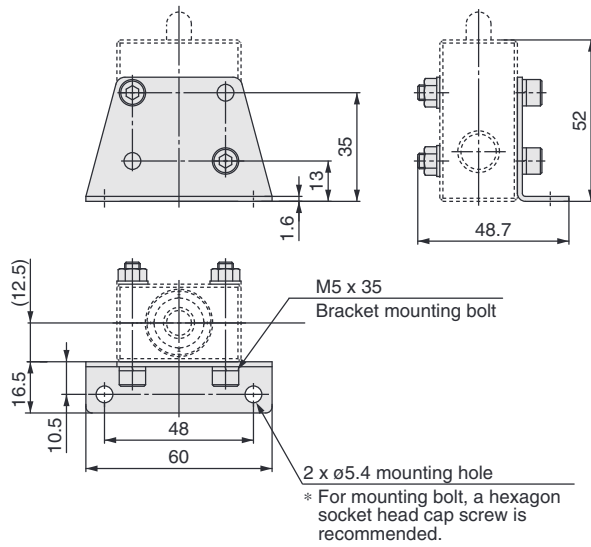


VM2-B

Component parts	Q'ty
Bracket	1
Hexagon socket head cap screw M5 x 35	2
Hexagon nut M5	2

With bottom mounting thread


VM220U-02-□A

VM230U-02-□A

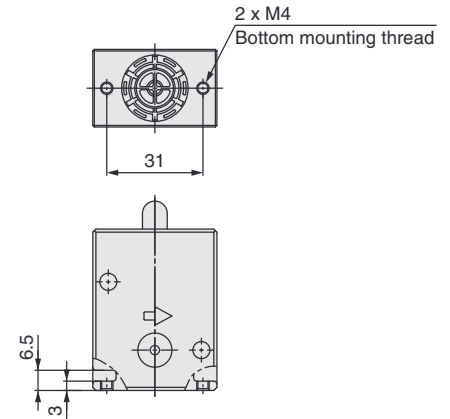

VM230U-02-35□A

VM250U-02-35□A

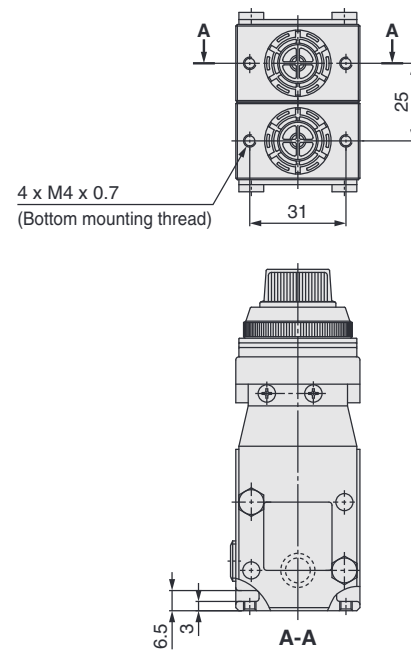

Series VM100/200

Made to Order

Please contact SMC for detailed specifications, dimensions and delivery.




1 Alternate type, Mushroom push button

Symbol
-X207A


Alternate type: When pressing the push button, the valve actuates and its status is self-retained even after your hand has been released. Pressing the button again will restore the valve to its previous status.

VM120-01-30 (R, B, G, Y) A-X207A


VM130-01-30 (R, B, G, Y) A-X207A

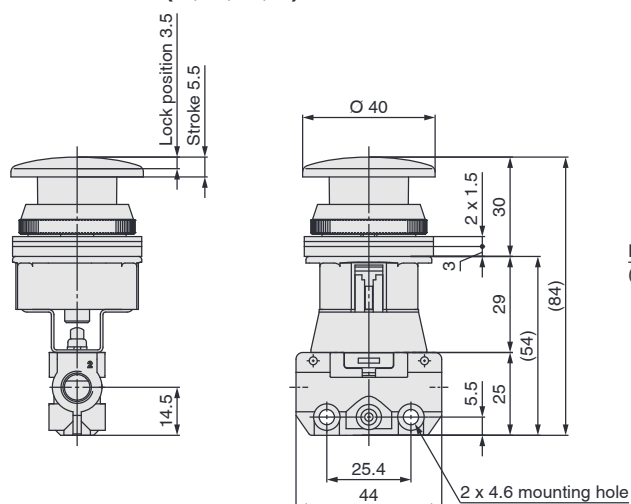


Panel mounting hole

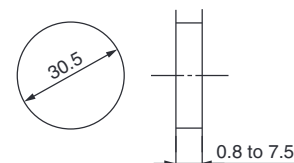

Symbol
2 port



3 port




* 0.5 MPa supply


F.O.F.*	27 N
---------	------

VM220-02-30 (R, B, G, Y) A-X207A


VM230-02-30 (R, B, G, Y) A-X207A

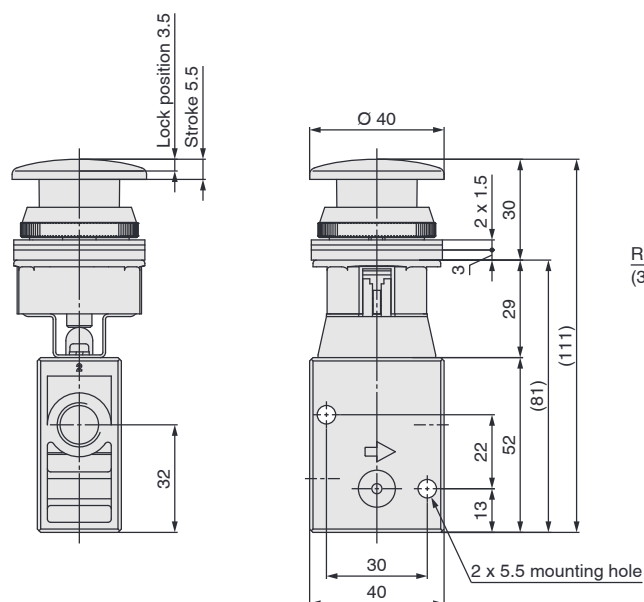


Panel mounting hole

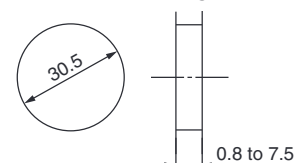

Symbol
2 port



3 port



* 0.5 MPa supply

F.O.F.*	52 N
---------	------


2 Push-lock turn-reset type, Mushroom push button

Symbol
-X219A


Push-lock turn-reset type: When pressing the push button, it is locked in this status. Turning the button clockwise will reset it.

VM120-01-30 (R, Y) A-X219A


VM130-01-30 (R, Y) A-X219A

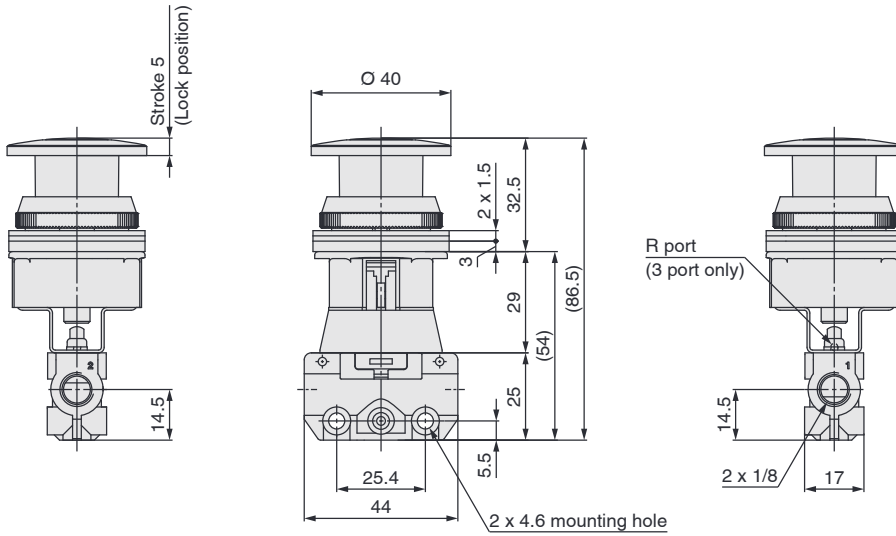


Panel mounting hole

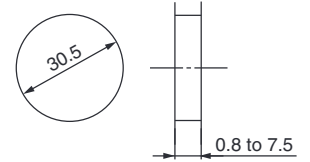

Symbol
2 port



3 port




* 0.5 MPa supply


F.O.F.*	27 N
---------	------

VM220-02-30 (R, Y) A-X219A


VM230-02-30 (R, Y) A-X219A

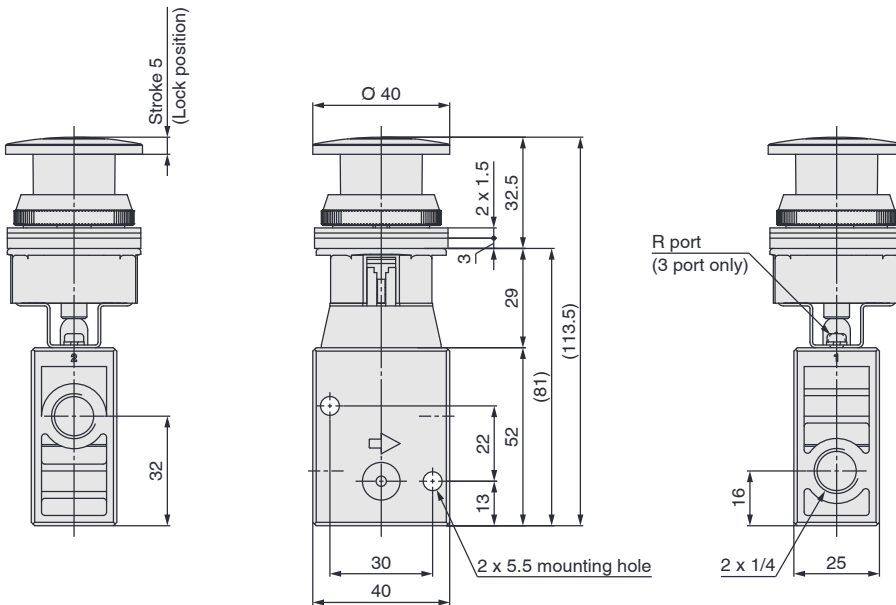


Panel mounting hole

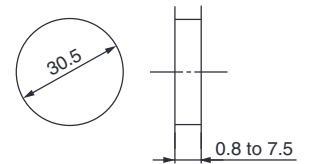

Symbol
2 port



3 port



* 0.5 MPa supply

F.O.F.*	52 N
---------	------




Series VM100/200 Specific Product Precautions 1

Be sure to read before handling.

Refer to back cover for Safety Instructions and “Handling Precautions for SMC Products” (M-E03-3) for 3/4/5 Port Solenoid Valve Precautions.

Definition of Symbol

The abbreviations F.O.F. / P.T. / O.T. / T.T. shown in this catalogue are detailed below.

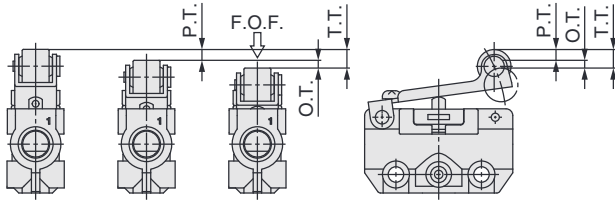

- **F.O.F. <Full Operating Force>**
Required force to total travel position
- **P.T. <Pre-travel>**
From free position to initial valve operating position
- **O.T. <Over Travel>**
From initial valve operating position to total travel position
- **T.T. <Total Travel>**
From free position to total travel position

Design

Warning

- 1. This product cannot be used for applications in which the pressure must be sealed.**

Since the VM100 and VM200 are poppet type valves, fluid flows backward when the pressure on port 2 (A) rises.

Since the valves are subject to air leakage, they cannot be used for applications such as holding pressure (including vacuum).

- 2. Not suitable for use as an emergency shutoff valve**

This mechanical valve is not designed for safety applications such as an emergency shutoff valve. If the valves are used for the mentioned applications, additional safety measures should be adopted.

Mounting

Warning

- 1. When installing the mechanical operation type mechanical valves, adjust the position so that the valves do not operate over the operating limit range.**

Operating over the limit could damage the mechanical valve or actuator, and lead to equipment malfunction.

Mounting

Warning


- 2. P.T. depends on pressure or differences between the individual product specifications. In order to ensure that the valve opens, keep the operating stroke value for the mechanical operation type within the range specified by the following formula.**

$$\text{Operating stroke} = (P.T. + 0.5 \times O.T.) \text{ to } (P.T. + O.T. - 0.1)$$

Operating Stroke Range

Series	Actuator type	Operating stroke [mm]
VM100	Basic	2.2 to 2.9
	Roller lever	4.3 to 5.4
	One way roller lever	4.3 to 5.4
	Straight plunger	2.7 to 3.4
	Roller plunger	2.7 to 3.4
	Cross roller plunger	2.7 to 3.4
VM200	Basic	4 to 4.9
	Roller lever	8.7 to 10.9
	One way roller lever	9.5 to 11.9
	Straight plunger	4.5 to 5.4
	Roller plunger	4.5 to 5.4
	Cross roller plunger	4.5 to 5.4

For straight and roller plunger types, there is a groove indicating P.T. and T.T. for stroke adjustment.

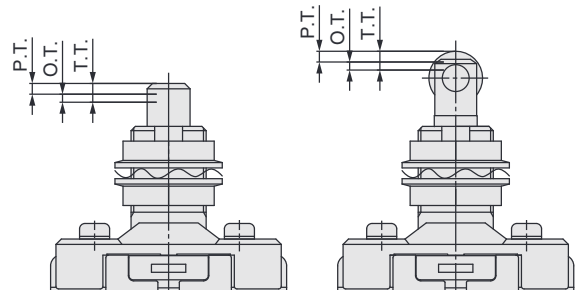

- 3. Do not make any alterations to the valve body, such as enlarging the body mounting holes.**

As doing so could lead to unexpected abnormal conditions such as air leakage.

Operation

Warning

- 1. Operate the manual operation type mechanical valves (such as push button, twist selector and toggle lever types) with your finger.**

The use of equipment such as a cylinder, cam or hammer, can result in the actuator and the valve being damaged.

Do not operate over the operation limit. If excessive operation force is applied over total travel position, actuator part can get deformed and lead to equipment malfunction.



Series VM100/200 Specific Product Precautions 2

Be sure to read before handling.

Refer to back cover for Safety Instructions and “Handling Precautions for SMC Products” (M-E03-3) for 3/4/5 Port Solenoid Valve Precautions.

Operation

Warning

- When operating the mechanical operation type mechanical valves, select the angle and the maximum speed limit of cam and dog so that valves do not operate over the following maximum values.


If operated over the maximum values, impact force from cam and dog will be applied to the actuator, leading to damage of the actuator or the valve itself.

Cam and Dog

Series	Actuator type	Angle limit of cam and dog	Max. speed limit of cam and dog (m/s)
VM100	Roller lever	30°	0.7
		45°	0.3
	One way roller lever	30°	0.7
		45°	0.3
	Straight plunger	—	0.2
	Roller plunger	30°	0.3
VM200	Roller lever	30°	0.7
		45°	0.3
	One way roller lever	30°	0.7
		45°	0.3
	Straight plunger	—	0.2
	Roller plunger	30°	0.3
	Cross roller plunger	30°	0.3


[Not acceptable]

Over 45° (Abrupt angle)

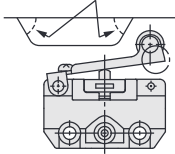


[Acceptable]

45° or less

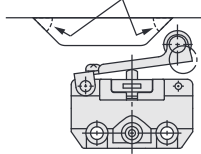


[Not acceptable]

Max. travel

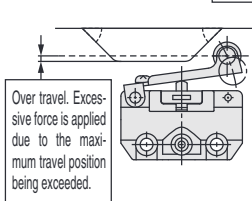

[Acceptable]

Max. travel

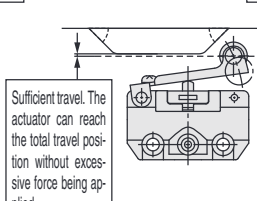


Cam and Dog Material

Roller material	Cam and dog material	Surface finish of cam and dog
Polyacetal	Steel	6.3 z or less
Hard steel	Steel, Resin	25 z or less


- Operate the roller lever type from the direction shown below.

In cases where the dog goes over the actuator, select the one way roller lever type or the roller plunger type.

[Not acceptable]

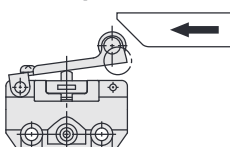

[Acceptable]

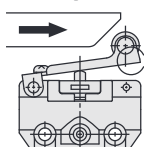

Operation

Caution

- If the operating condition is maintained for long periods of time, it may take some time for the valve to restart due to the adherence of the seals and there might be a delay for recovery.

Air Supply

Warning

- Operable fluid is either air or inert gas only.
It cannot be used for corrosive gas and fluid.

Caution

- Grease is used for the inside of the valves.
Grease may enter into the outlet port of the valve.
- When using vacuum pressure for the VM100, supply vacuum pressure to P port.

Operating Environment

Warning

- Do not operate it in an area in which fluids such as oil, coolant, or water splash on it or dust comes in contact with it.
Because it does not have a waterproof or dustproof construction, fluids or dust could enter the valve, leading to malfunction. Therefore, take measures such as providing a protective cover to prevent direct exposure.
- Do not expose the product to direct sunlight for an extended period of time.

Maintenance

Warning

- Perform inspections on a regular basis as necessary, such as at the beginning of an operation, to make sure that the mechanical valve operates properly.
- Do not disassemble, modify or repair the product.
This may lead to malfunction of equipment, injury and equipment damage. Please contact SMC for repairs and maintenance of the product.



Series VM100/200

Specific Product Precautions 3

Be sure to read before handling.

Refer to back cover for Safety Instructions and “Handling Precautions for SMC Products” (M-E03-3) for 3/4/5 Port Solenoid Valve Precautions.


How to Change the Buttons

Caution

Replace the button in the following manner to change colour of the button.

1. Push button (Flush type)


- Installation — Of the four colours, red, green, black, and yellow, select and align the protruding portion of the button with the recessed portion of the body and push in.
- Removal — Remove the fastening ring and insert the tip of a small flat head screwdriver into the groove of the button to pry it up.

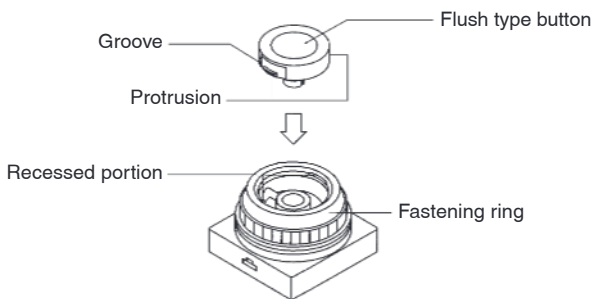

2. Push button (Mushroom and Extended types)


At the time of shipment, only 1 button of the colour that you specified is attached to the body.

	Mushroom type	Extended type
Installation	Align the protruding portion of the button with the recessed portion of the body and push in. (Use the mark on the button as a reference to align the protruding part.)	Align the protruding portion of the button with the recessed portion of the body and push in.
Removal	Placing your finger under the collar of the button on the side of the mark, tilt it upward.	Remove the fastening ring and insert the tip of a small flat head screwdriver into the groove of the button to pry it up.

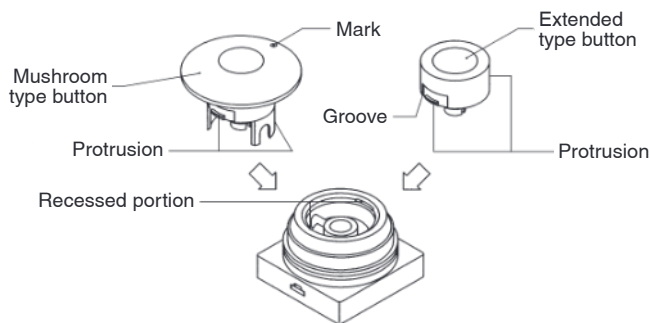


How to remove a mushroom type button

How to remove at panel mount

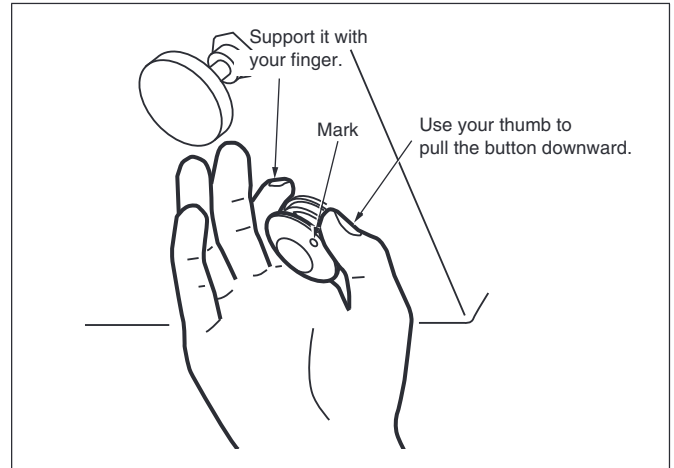

Removing the valve as a unit

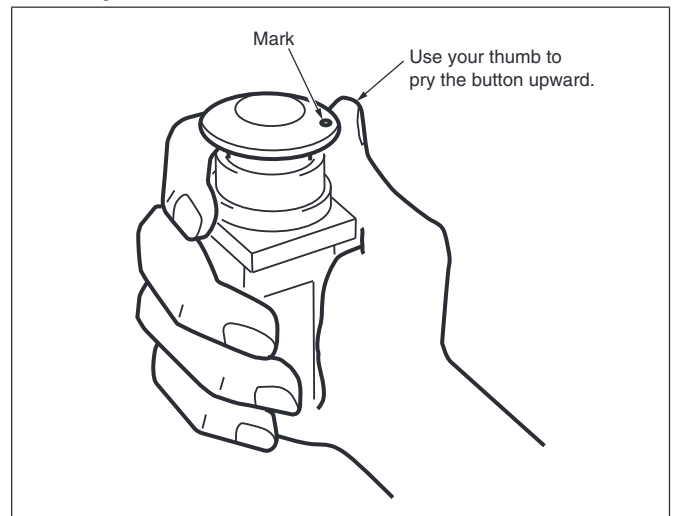

Replacement Parts

1. Use the part numbers listed below to order individual mushroom, extended, or flush type buttons.

Colour	Mushroom type button	Extended type button
Red	3402186R	3402187R
Black	3402186B	3402187B
Green	3402186G	3402187G
Yellow	3402186Y	3402187Y

Colour	Flush type button
Red	3402188R
Black	3402188B
Green	3402188G
Yellow	3402188Y

2. Use the part number below to order individual fastening ring.
Fastening ring: 3402184



Series VM100/200 Specific Product Precautions 4


Be sure to read before handling.

Refer to back cover for Safety Instructions and “Handling Precautions for SMC Products” (M-E03-3) for 3/4/5 Port Solenoid Valve Precautions.

X207A, X219A Series How to Mount Panel


[Task 1] Removing the push button and fastening ring

Remove them from the body turning them counterclockwise in the order of the push button and fastening ring.

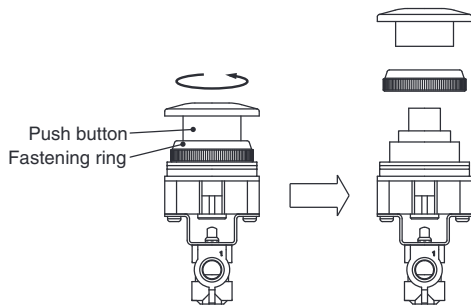


[Task 2] Mounting the valve to the panel

Insert the valve to the panel and fix it with a fastening ring. Remove three spacers attached to the valve depending on the panel thickness.

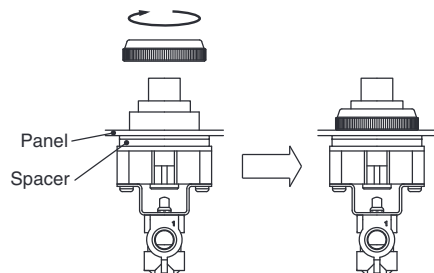

[Task 3] Mounting the push button

Tighten the push button clockwise by hand and further tighten it until load is applied.

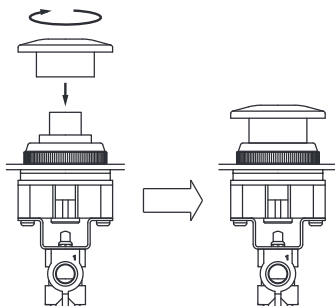

Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “Caution,” “Warning” or “Danger.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC) ¹⁾, and other safety regulations.

-  **Caution:** **Caution** indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
-  **Warning:** **Warning** indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
-  **Danger:** **Danger** indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

- 1) ISO 4414: Pneumatic fluid power – General rules relating to systems.
ISO 4413: Hydraulic fluid power – General rules relating to systems.
IEC 60204-1: Safety of machinery – Electrical equipment of machines.
(Part 1: General requirements)
ISO 10218-1: Manipulating industrial robots - Safety.
etc.

Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.
If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.
If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”. Read and accept them before using the product.

Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first. ²⁾ Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
- 2) Vacuum pads are excluded from this 1 year warranty.
A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.


Caution

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country.
Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

Safety Instructions

Be sure to read “Handling Precautions for SMC Products” (M-E03-3) before using.

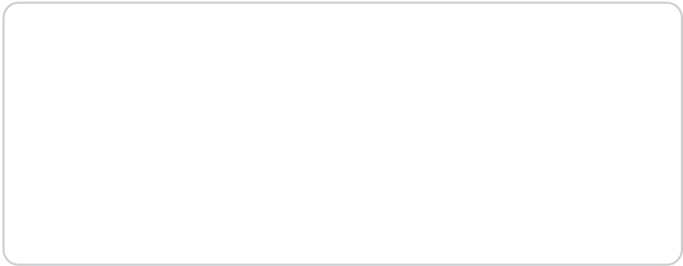

SMC Corporation (Europe)

Austria	+43 (0)2262622800	www.smc.at	office@smc.at
Belgium	+32 (0)33551464	www.smc.be	info@smc.be
Bulgaria	+359 (0)2807670	www.smc.bg	office@smc.bg
Croatia	+385 (0)13707288	www.smc.hr	office@smc.hr
Czech Republic	+420 541424611	www.smc.cz	office@smc.cz
Denmark	+45 70252900	www.smc.dk.com	smc@smcdk.com
Estonia	+372 651 0370	www.smcee.ee	info@smcee.ee
Finland	+358 207513513	www.smc.fi	smc@smc.fi
France	+33 (0)164761000	www.smc-france.fr	supportclient@smc-france.fr
Germany	+49 (0)61034020	www.smc.de	info@smc.de
Greece	+30 210 2717265	www.smchellas.gr	sales@smchellas.gr
Hungary	+36 23513000	www.smc.hu	office@smc.hu
Ireland	+353 (0)14039000	www.smcautomation.ie	sales@smcautomation.ie
Italy	+39 03990691	www.smcitalia.it	mailbox@smcitalia.it
Latvia	+371 67817700	www.smc.lv	info@smc.lv

Lithuania	+370 5 2308118	www.smclt.lt	info@smclt.lt
Netherlands	+31 (0)205318888	www.smc.nl	info@smc.nl
Norway	+47 67129020	www.smc-norge.no	post@smc-norge.no
Poland	+48 222119600	www.smc.pl	sales@smc.pl
Portugal	+351 214724500	www.smc.eu	apoioclientept@smc.smces.es
Romania	+40 213205111	www.smcromania.ro	smcromania@smcromania.ro
Russia	+7 (812)3036600	www.smc.eu	sales@smcru.com
Slovakia	+421 (0)413213212	www.smc.sk	office@smc.sk
Slovenia	+386 (0)73885412	www.smc.si	office@smc.si
Spain	+34 945184100	www.smc.eu	post@smc.smces.es
Sweden	+46 (0)86031240	www.smc.nu	smc@smc.nu
Switzerland	+41 (0)523963131	www.smc.ch	info@smc.ch
Turkey	+90 212 489 0 440	www.smcturkey.com.tr	info@smcturkey.com.tr
UK	+44 (0)845 121 5122	www.smc.uk	sales@smc.uk

South Africa	+27 10 900 1233	www.smcza.co.za	zasales@smcza.co.za
---------------------	-----------------	-----------------	---------------------